

RUT200 Mobile Utilities

[Main Page](#) > [RUT Routers](#) > [RUT200](#) > [RUT200 Manual](#) > [RUT200 WebUI](#) > [RUT200 Services section](#) > **RUT200 Mobile Utilities**

The information in this page is updated in accordance with firmware version [RUT2M_R_00.07.04.5](#).

□

Contents

- [1 Summary](#)
- [2 SMS Utilities](#)
 - [2.1 SMS rule execution syntax](#)
 - [2.2 Modify SMS Rule](#)
 - [2.3 Change mobile settings \(cellular\) rule](#)
 - [2.4 UCI API rule](#)
 - [2.5 Custom Rules](#)
- [3 SMS Gateway](#)
 - [3.1 Post/Get](#)
 - [3.2 Auto Reply](#)
 - [3.3 SMS Forwarding](#)
 - [3.3.1 SMS Forwarding To HTTP](#)
 - [3.3.2 SMS Forwarding To SMS](#)
 - [3.3.3 SMS Forwarding To Email](#)
 - [3.4 Email To SMS Forwarding](#)
 - [3.5 SMPP](#)
- [4 Call Utilities](#)
 - [4.1 Call Rules](#)
 - [4.2 Incoming Calls](#)
- [5 Messages](#)
 - [5.1 Read Messages](#)
 - [5.2 Send Messages](#)
 - [5.3 Storage](#)

Summary





The **Mobile Utilities** page is used to configure various SMS and Call related device control options and to read, send and manage SMS messages and SMS storage space.

This manual page provides an overview of the Mobile Utilities page in RUT200 devices.

SMS Utilities

The **SMS Utilities** section contains a list of rules that perform certain actions when they are activated by SMS messages.

^ SMS RULES

ACTION	SMS TEXT	AUTHORIZATION METHOD		<input type="checkbox"/> off <input checked="" type="checkbox"/> on
Reboot	reboot	By device admin password	 	<input type="checkbox"/> off <input checked="" type="checkbox"/> on
Send status	status	By device admin password	 	<input type="checkbox"/> off <input checked="" type="checkbox"/> on

The entire list contains more than 20 rules, but it does not include all possible SMS actions. You can also create custom rules or modify existing rules. All possible SMS rule actions, their default SMS texts and descriptions are listed in the table below.

Action	SMS Text	Description
Change I/O state	<i>ioset</i>	Changes the state of a selected output.
Change mobile settings	<i>cellular</i>	Is used to configure the device's mobile data connection. Click here for more information on this rule.
Change profile	<i>no default text</i>	Is used to change profiles on the device. Include the name of the profile that you wish to change to after the rule's SMS text, for example if SMS text is set to <i>changeprof</i> : <ul style="list-style-type: none">• <i>changeprof default</i>• <i>changeprof custom</i>
Execute custom script	-	Executes a custom shell script.
FW upgrade from server	<i>fw_upgrade</i>	Upgrades the device's firmware (provided a new version is available on the FOTA server).
Get list of profiles	<i>profdisp</i>	Sends a list of configuration profiles existing on the device.
IP unblock	<i>ipunblock</i>	Unblocks Web/SSH access for devices that were blocked for too many unsuccessful connection attempts. Send the SMS text to unblock all blocked devices or include the IP address of a single blocked device after the SMS text. For example: <ul style="list-style-type: none">• <i>ipunblock</i> - clears the block list (unblocks Web/SSH access for all previously blocked devices).• <i>ipunblock 192.168.1.2</i> - removes this IP address from the block list (unblocks Web/SSH access for that device).
I/O status	<i>iostatus</i>	Sends a status report message on the state of the device's inputs and outputs.
Manage OpenVPN	<i>vpn</i>	Turns a selected OpenVPN instance on. Include the name of the OpenVPN instance that you wish to turn on after the rule's SMS text: <ul style="list-style-type: none">• <i>vpn client_name</i>• <i>vpn server_name</i>

Manage OpenVPN	<i>vpnoff</i>	Turns a selected OpenVPN instance off. Include the name of the OpenVPN instance that you wish to turn off after the rule's SMS text: <ul style="list-style-type: none"> • <i>vpnoff client_name</i> • <i>vpnoff server_name</i>
Mobile Data limit status	<i>no default text</i>	Sends a status report message that includes data limit usage information for mobile network interfaces (that have Mobile Data Limit enabled)
Mobile Data usage reset	<i>no default text</i>	Resets mobile data usage for specified interface.
Monitoring status	<i>monitoring_status</i>	Sends a status report message that includes the RMS connection type, state and the device serial number and MAC address.
More	<i>more</i>	Displays next part of a composite response message (more than 160 characters).
OpenVPN status	<i>vpnstatus</i>	Sends a status report message on all OpenVPN connections.
Reboot	<i>reboot</i>	Reboots the device.
Restore to default	<i>restore</i>	Restores factory settings on the device.
RMS action	<i>rms_on</i>	Turns RMS connection on.
RMS action	<i>rms_off</i>	Turns RMS connection off.
RMS connect	<i>rms_connect</i>	Forces the device to connect to RMS. This action is analogous to clicking the 'Connect' button in the Cloud Solutions → RMS page .
RMS status	<i>rms_status</i>	Sends a status report message on the state of the connection to RMS.
Send status	<i>status</i>	Sends a status report message.
SSH access control	<i>sshon</i>	Turns remote and local (by default) SSH access on. This rule can be modified to only include local SSH access.
SSH access control	<i>sshoff</i>	Turns SSH access off.
Switch mobile data	<i>mobileon</i>	Turns mobile data usage on.
Switch mobile data	<i>mobileoff</i>	Turns mobile data usage off.
Switch WiFi	<i>wifion</i>	Turns the WiFi radio on.
Switch WiFi	<i>wifioff</i>	Turns the WiFi radio off.
UCI API	<i>uci</i>	Is used to change the configuration settings on the device. Click here for more information on the UCI API rule.
Restore to user's defaults	<i>userdefaults</i>	Restores user's default configuration on the device. Click here for more information on User's default configuration.
Wake on LAN	<i>wakeup</i>	Sends a magic packet that "wakes up" a specified device from standby mode. If you have multiple Wake-on-LAN-capable devices, you will have to create a separate rule with a different SMS text for each one. Configuration for each device must include the MAC address of that device.
Web access control	<i>webon</i>	Turns remote and local (by default) HTTP and HTTPS access on. This rule can be modified to only include local HTTP/HTTPS access.

Web access control

weboff

Turns HTTP and HTTPS access off. This rule can also be modified to turn off either HTTP or HTTPS separately.

SMS rule execution syntax

To execute an SMS rule, send an SMS message to your device's SIM card number with the rule's **SMS Text** preceded by the selected **authorization keyword**, which depends on the selected *authorization method*:

- **No authorization** - no special keyword required; simply send a rule's *SMS Text*. For example, to execute the *reboot* rule without authorization:

```
reboot
```

- **By serial** - include the device's serial number before a rule's *SMS Text*. For example, to execute the *iostatus* rule with serial authorization:

```
1111111111 iostatus
```

(replace 1111111111 with your device's serial number)

- **By device admin password** - include the device's password before a rule's *SMS Text*. For example, to execute the *vpn* rule with admin password authorization:

```
admin01 vpn
```

(replace admin01 with your device's admin password)


- **By password** - include the configured custom password before a rule's *SMS Text*. For example, to execute the *ssh* rule with password authorization:

```
Custompw1 ssh
```

(replace Custompw1 with your configured custom password)

Modify SMS Rule

Every SMS rule can be edited to your liking. To begin configuring a rule, click the 'Edit' button located next to it:

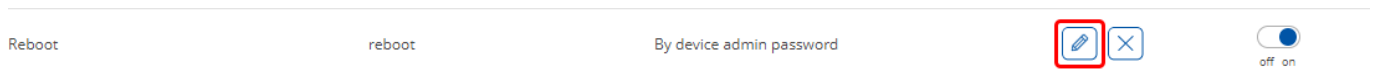

After this you should be redirected to the configuration page for that rule. Below are examples of what the configuration page for the *reboot* rule looks like.

General settings

GENERAL

AUTHORIZATION

1

Enable

off on

2

Action

Reboot

3

SMS text

reboot

SMS text, which let's you reboot your router. E.g. 'reboot'

4

Get status via SMS after reboot

off on

5

Message forwarding

off on

6

Text message

Router name - %rn; WAN IP - %wi; Data Connection state - %cs; Connection type - %ct; Signal Strength - %ss; New FW available - %fs;

Time stamp - %ts	Router name - %rn	Serial number - %sn
Mobile IP addresses - %mi	Signal strength - %ss	Current FW version - %fc
WAN IP address - %wi	LAN IP address - %li	Monitoring status - %ms
Operator name - %on	Connection type - %ct	Data connection state - %cs
Network state - %ns	IMSI - %im	IMEI - %ie
Modem model - %md	Modem serial number - %is	SIM pin state - %ps
SIM state - %st	RSCP - %cp	ECIO - %ec
ICCID - %ic	CELLID - %ci	Network serving - %sv
New line - %nl	SIM slot in use - %su	RSRP - %rp
SINR - %sr	RSRQ - %rq	Neighbour cells - %nb
Network info - %ni		

Time stamp - %ts	Product code - %rn	Serial number - %sn
Mobile IP addresses - %mi	Signal strength - %ss	Current FW version - %fc
WAN IP addresses - %wi	LAN IP address - %li	Monitoring status - %ms
Operator name - %on	Connection type - %ct	Data connection state - %cs
Network state - %ns	IMSI - %im	IMEI - %ie
Modem model - %md	Modem serial number - %is	SIM pin state - %ps
SIM state - %st	RSCP - %cp	ECIO - %ec
RSRP - %rp	SINR - %sr	RSRQ - %rq
ICCID - %ic	CELLID - %ci	Neighbour cells - %nb
Network info - %ni	Network serving - %sv	New line - %nl

SAVE & APPLY

1. The **Enable** slider turn the rule on or off. In order to use a rule, this slider must be set to 'on'. By default, all existing SMS rules are turned on.
2. The **Action** dropdown selection specifies which action should be performed when the rule is executed.
3. The **SMS text** field specifies the text that will trigger the rule upon receiving a message.
4. The **Get status via SMS after reboot** slider specifies whether the device should send a status report message after an action is executed. The name of this slider may differ from rule to rule and it is only available for some rules.
5. The **Message forwarding** slider specifies whether the device should send a status report message to another number (besides the original sender). Setting this slider to 'on' will prompt you to enter an additional phone number(s) of the status message recipient(s).
6. The **Text message** box is used to modify the text that should be included in an SMS rule's response message.

Authorization

^ MODIFY SMS RULE

GENERAL

AUTHORIZATION

1 Authorization method

2 Allowed number(s)

< BACK SAVE & APPLY

1. The **Authorization method** dropdown selection specifies the type of authorization an SMS rule requires (device admin password, serial number, password or none). If **By password** is selected a **Password** field will appear and a custom password will be required. A custom password must have at least one uppercase letter, one lowercase letter, one number and must be from a minimum of 8 to a maximum of 80 characters in length.
2. The **Allowed number(s)** dropdown selection specifies who can execute an SMS rule (based on phone number).

Most rules are configured in a similar manner. However, the configuration does differ from rule to rule, depending on a rule's purpose (selected 'Action'). If you run into trouble when configuring a rule, hover your mouse cursor over the name of a field to see a hint that explains what that field does.

Change mobile settings (cellular) rule

The **Change mobile settings** rule is used to change the configuration settings of the mobile data connection. The usage of this rule is a bit more complex because the SMS text in and of itself does nothing, as you must also specify the parameters and values that you wish to set. For example, you can send a message that will change your APN only or a message that will change multiple parameters at once.

^ MODIFY SMS RULE

GENERAL

AUTHORIZATION

Enable

Action

SMS text

SMS text, which let's you to change your mobile settings to SIM1 or SIM2.
E.g. 'cellular apn=internet.gprs auth=pap service=3g username=user password=user'

SAVE & APPLY

Below is the full list of parameters that can be changed with this rule.

Parameter	Description	SMS text example
apn=	Sets APN.	<i>cellular apn=internet</i>
auto_apn=	Turns auto APN on or off. Possible values are 0/1.	<i>cellular auto_apn=1</i>
dialnumber=	Sets Dialing number.	<i>cellular dialnumber=*99***1#</i>

auth_mode=	Sets the authentication method. Possible values are: <ul style="list-style-type: none"> • none • pap • chap 	<i>cellular auth_method=pap</i>
service=	Sets the service mode. Possible values are: <ul style="list-style-type: none"> • 2g • 3g • lte • mixture of any two modes (ex.: 3g_lte) • auto 	<i>cellular service=auto</i>
username=	Sets the user name for PAP or CHAP authentication.	<i>cellular username=user</i>
password=	Sets the password for PAP or CHAP authentication.	<i>cellular password=pass</i>
roaming=	Turns mobile data roaming on or off. Possible values are: <ul style="list-style-type: none"> • 0 - for off. • 1 - for on. 	<i>cellular roaming=0</i>

Each example above contains a single parameter but you can also send out multiple parameters in one message. For example:

```
cellular apn=internet service=3g
```

This message would set your APN to "internet" and the service mode of the mobile connection to "3G Only". You can also send a message that would include all of the parameters above:

```
cellular apn=internet auth_mode=pap service=3g username=user password=pass
roaming=0
```

Note: only "apn=" or "auto_apn=" is required in a message. For example, to set custom APN:

```
cellular apn=internet
```

or if you want to turn auto APN on:

```
cellular auto_apn=1
```

UCI API rule

The **UCI API** rule is used to configure any parameters on the device.

GENERAL

AUTHORIZATION

Enable

Action

SMS text

UCI lets you set or get any parameter from router's configuration files. Following are syntax examples:

```
"uci get config.section.option"
"uci set config.section.option=value"
"uci show config"
"uci show config.section"
And one actual example that will return device's LAN address:
"uci show network.lan.ipaddr"
```

Message forwarding

< BACK

SAVE & APPLY

The following are syntax examples for the UCI API rule:

Structure example	Description	SMS text example
<code>uci get <config>.<section>.<option_name></code>	Returns the value of a single configuration option.	<ul style="list-style-type: none"> <code>uci get network.wan.ipaddr</code> Returns the router's WAN IP address.
<code>uci set <config>.<section>.<option_name>="value"</code>	Sets the value of a specified configuration option.	<ul style="list-style-type: none"> <code>uci set network.mobile.apn=example</code> Changes mobile APN value to "example".
<code>uci show <config></code>	Returns the contents of a config file	<ul style="list-style-type: none"> <code>uci show openvpn</code> Returns the contents of the "openvpn" config file.
<code>uci show <config>.<section></code>	Returns the exact part (section) of a config file.	<ul style="list-style-type: none"> <code>uci show network.lan</code> Returns the configuration of the "lan" section from the "network" config file.

The UCI rule requires that you know the names of the configuration files and sections and parameters contained within them. You can find the config file list and some examples of the UCI system usage in our [UCI command usage](#) article.

Disclaimer: do not enclose values in **escape characters** like you would when executing UCI commands via CLI. For example: `uci set network.mobile.apn="example"` will cause an error in SMS API and your value will be altered, as a result, UCI commands execution will fail. Instead, simply write `uci set network.mobile.apn=example` without any escape characters or quotes.

Custom Rules

If none of the default rules suit your purposes, you can also configure custom ones. To do so, scroll down to the very bottom of the SMS Utilities page, where you will find the **Add Rule** section. Enter a custom SMS text, select an Action and click the 'Add' button:



SMS Gateway

This section provides a summary of the **SMS Gateway** functions for RUT200 devices.

Post/Get

Post/Get allows you to perform action requests by writing them in the URL after your device's IP address.

MOBILE POST/GET SETTINGS

Enable

Access

Username

Password

Confirm password

[SAVE & APPLY](#)

Field	Value	Description
Enable	off on; default: off	Enable SMS management functionality through POST/GET
Access	mobile_data sms_delete sms_list sms_read sms_send sms_total; default: mobile_data, sms_delete, sms_list, sms_read, sms_send, sms_total	Methods available for Post/Get. All methods are allowed if this list is left empty.
User name default: user1		User name used for authorization (5 characters minimum). Allowed characters (a-zA-Z0-9!@#%&*+/-=?^_`{ }~.)
Password default: user_pass		Password used for authorization (5 characters minimum). Allowed characters (a-zA-Z0-9!@#%&*+/-=?^_`{ }~.)

Use a web browser or any other compatible software to send HTTP post/get strings to the router. The router must be connected to a GSM network when using the Send SMS feature. Below you will find a table with possible actions and examples on how to use them:

Action	Post/get URL examples
View mobile messages list	http://192.168.1.1/cgi-bin/sms_list?username=user1&password=user_pass
Read mobile message	http://192.168.1.1/cgi-bin/sms_read?username=user1&password=user_pass&number=1
Send mobile message to a single number	http://192.168.1.1/cgi-bin/sms_send?username=user1&password=user_pass&number=0037060000001&text=testmessage
Send mobile message to a group	http://192.168.1.1/cgi-bin/sms_send?username=user1&password=user_pass&group=group_name&text=testmessage
View mobile messages total	http://192.168.1.1/cgi-bin/sms_total?username=user1&password=user_pass
Delete mobile message	http://192.168.1.1/cgi-bin/sms_delete?username=user1&password=user_pass&number=1

- **192.168.1.1** - router's IP address. (Replace it with your [LAN IP](#) or [WAN IP](#) (when connecting remotely))
- SMS related post/get commands. Possible values are:

- *sms_list* - view all SMS messages in storage
- *sms_read* - read a single SMS message by specified SMS index (number)
- *sms_send* - send an SMS message to specified recipient
- *sms_total* - display SMS storage statistics
- *sms_delete* - delete a single SMS message by specified SMS index (number)
- **&** - separation symbol. After specifying the SMS command, other parameters must be separated by an *ampersand* (&) symbol
- **username** - SMS post/get configuration user name
- **password** - SMS post/get configuration password
- **number** - SMS message index or (depending on context) recipient's phone number. SMS message indexes can be viewed with the *sms_list* command.

Correct phone number format is:

- *00* - number must be preceded by two zeros
- *<country_code>* - the next following element is the number holder's country code
- *<receivers_number>* - phone number of the recipient

For example, a valid number would be **0037012345678** (370 is country code and 12345678 is the receiver's phone number, all preceded by 00)

- **text** - SMS message text

To use Post/Get via SSH instead of a browser, you may want to use the ***curl -X*** command. Simply add the same URL command in between quotes and specify the HTTP method.

Examples:

- **View SMS list:**

```
curl -X GET
"http://192.168.1.1/cgi-bin/sms_list?username=user1&password=user_pass"
```

- **Send SMS:**

```
curl -X GET
"http://192.168.1.1/cgi-bin/sms_send?username=user1&password=user_pass&number=00370000000000&text=testmessage"
```

Auto Reply

Auto reply allows you to configure automatic replying to SMS messages that the router receives.

Enable off on

Reply SMS-Utilities rules off on

Don't save received message off on

Mode

Message text

[SAVE & APPLY](#)

Field	Value	Description
Enable	off on; default: off	Toggles Auto Reply ON or OFF
Reply SMS-Utilities rules	off on; default: off	It will reply to sms rules, from SMS-Utilities
Don't save received messages	off on; default: off	If enabled, the router will delete received SMS messages
Mode	default: Everyone	Specifies whether to auto reply to every phone number or just just specified phone numbers. Available options: <ul style="list-style-type: none">• Everyone• Listed numbers• From user group
Message text	default: none	The message that will be sent in reply

SMS Forwarding

This section is a summary of the SMS Forwarding function in RUT200 routers.

SMS Forwarding To HTTP

The SMS Forwarding To HTTP functionality forwards SMS messages to HTTP, using either POST or GET methods.

✓ SMS FORWARDING TO HTTP CONFIGURATION

Enable

Forward SMS-Utilities rules

Don't save received message

Include sender's number

Encode message text to Base64

HTTPS certificate verification

Method

URL

Message value name

Extra data pair 1

Extra data pair 2

Mode

Field	Value	Description
Enable	off on; default: off	Enable/disable SMS forwarding to HTTP
Forward SMS-Utilities rules	off on; default: off	Enable/disable sms-utilities rules forwarding
Don't save received message	off on; default: off	Select whether you want to save forwarded messages or not
Include sender's number	off on; default: off	Enable/disable adding original message sender phone number at the end of message text
HTTPS certificate verification	default: Ignore	Select whether to ignore or verify server certificate. Available options: <ul style="list-style-type: none"> Ignore Verify
Method	default: Get	Choose witch HTTP request method will be used. Available options: <ul style="list-style-type: none"> Get Post
URL	default: none	URL to which message is going to be forwarded
Number value name	default: none	Sender phone number code name for query string name/value pair
Message value name	default: none	Message code name for query string name/value pair
Extra data pair 1	default: none	Extra html query name/value pair. Enter name to the left field and value to right
Extra data pair 2	default: none	Extra html query name/value pair. Enter name to the left field and value to right
Mode	default: Everyone	Specifies whether to auto reply to every phone number or just specified phone numbers. Available options: <ul style="list-style-type: none"> Everyone Listed numbers From user group

SMS Forwarding To SMS

The **SMS Forwarding To SMS** function forwards SMS messages to one or several recipients.

▼ SMS FORWARDING TO SMS CONFIGURATION


Enable

Forward SMS-Utilities rules

Don't save received message

Add sender number

Mode

Recipients phone numbers 

Field	Value	Description
Enable	off on; default: off	Enables/disables SMS forwarding to SMS
Forward SMS-Utilities rules	off on; default: off	Enable/disable sms-utilities rules forwarding
Don't save received message	off on; default: off	Select whether you want to save forwarded messages or not
Add sender's number	off on; default: off	Enable/disable adding original message sender phone number at the end of message text. Only added if total message length is up to 480 characters
Mode	default: Everyone	Specifies whether to auto reply to every phone number or just just specified phone numbers. Available options: <ul style="list-style-type: none">• Everyone• Listed numbers• From user group
Recipients phone numbers	default: none	Number(s) to which received messages will be forwarded to

SMS Forwarding To Email

The **SMS Forwarding To Email** function forwards SMS messages to email.



Field	Value	Description
Enable	off on; default: off	Enables/disables SMS forwarding to Email
Forward SMS-Utilities rules	off on; default: off	Enables/disables sms-utilities rules forwarding
Don't save received message	off on; default: off	Select whether you want to save forwarded messages or not
Add sender's number	off on; default: off	Enable/disable adding sender phone number at the end of email text body

Subject	default: none	Subject of an email. Allowed characters (a-zA-Z0-9!@#\$\$%&*+/-=?^_`{ }~.)
Email group	default: none	Sender's email configuration
Recipient's email address	default: none	For whom you want to send an email to. Allowed characters (a-zA-Z0-9._%+)
Mode	default: Everyone	Specifies whether to auto reply to every phone number or just just specified phone numbers. Available options: <ul style="list-style-type: none"> • Everyone • Listed numbers • From user group

Email To SMS Forwarding

Email to SMS Forwarding is a function that connects to your email account and checks its inbox at the specified frequency. If it finds any new received emails with a specific subject (phone number in email subject), it sends the body of the email as an SMS message(s) to the recipient specified in the email subject field.

Important note: all POP3 server email messages from inbox will be deleted when using this service.

EMAIL TO SMS FORWARDING

Enable

POP3 server

Server port

Username

Password

Secure connection (TLS)

SMS limit

Interval

Check email every

SAVE & APPLY

Field	Value	Description
Enable	off on; default: off	Turns Email to SMS Forwarding ON or OFF
POP3 server	host ip; default: none	Email service provider's POP3 server address (can be looked up online)
Server port	integer [0..65535]; default: none	Email service provider's POP3 server port (can be looked up online)
User name	string; default: none	Email account user name. This is information is used by router in order to authenticate itself when connecting to the email client

Password	string; default: none	Email account password. This information is used by router in order to authenticate itself when connecting to the email client
Secure connection (TLS)	off on; default: off	Enables/disables secure connection (TLS 1.2 and up). TLS (Transport Layer Security) is a cryptographic protocol designed to provide communications security over a computer network. TLS uses a combination of symmetric cryptography (single secret key known to both sender and receiver to encrypt data) and asymmetric cryptography (a public key known to everyone and a private or secret key known only to the recipient of the message) to encrypt data.
Verify TLS certificate validity	off on; default: off	Enables/disables TLS certificate validation. When enabled verifies the validity of the POP3 server certificate
SMS limit	integer; default: 5	Limit of SMS count that can be contained in the email body of text, SMS length is limited to 160 seven-bit characters. Emails that contain more symbols than it is specified in this field will not be sent as SMS messages
Check email every	time; default: 1 minute	Email inbox check interval
Interval	Minutes Hours Days; default: Minutes	Email inbox check interval

Additional note: you may have noticed that there is no option where you can specify the recipient's phone number. As mentioned earlier, **Email to SMS** doesn't forward all emails, only the ones that are meant to be forwarded. Only emails with the recipient's phone number in the subject will be forwarded to SMS

Correct phone number format is:

- *00* - number must be preceded by two zeros
- *<country_code>* - the next following element is the number holder's country code
- *<receivers_number>* - phone number of the recipient

For example, a valid number would be **0037012345678** (370 is country code and 12345678 is the receiver's phone number, all preceded by 00)

Recommendations note:

- Email to SMS application can't guarantee best results when working with flooded email inbox. It is recommended to have less than 100 emails in the inbox.
- Less emails - better performance.
- In most cases it is best to use dedicated inbox.

SMPP

Short Message Peer-to-Peer (SMPP) is a protocol used for exchanging SMS messages between Short Message Service Centers (SMSC) and/or External Short Messaging Entities (ESME). The figure below is an example of the SMPP section and the table below provides information on the configuration fields contained in that section:

SMPP SERVER CONFIGURATION

Enable off on

Username

Password

Server port

SAVE & APPLY

Field	Value	Description
Enable	off on; default: off	Turns SMPP on or off.
User name	string; default: admin	User name used for authentication on the SMPP server.
Password	string; default: admin01	Password used for authentication on the SMPP server.
Server port	integer [0..65535]; default: 2775	SMPP server port.

Call Utilities

Just like SMS Utilities, Call Utilities provide you with the possibility to issue certain commands to the router from your mobile phone. The list of possible rules is of course shorter because you can only make one type of call. Keep that in mind when creating Call Utilities rules because one call will trigger all of the enabled rules at once.

Call Rules

To create a new rule, select an 'Action' and click the 'Add' button. After this, a new configuration window should appear.

CALL CONFIGURATION

GENERAL

AUTHORIZATION

Enable off on

Action

Get status via SMS after reboot off on

SAVE & APPLY

GENERAL

AUTHORIZATION

Allowed users

Incoming Calls

This option specifies the action to be performed on incoming calls. Call utilities rules will keep getting executed while the call is active.

∨ INCOMING CALLS

Action

SAVE & APPLY

Messages

With the help of the **Messages** window you can read and send SMS messages.

Read Messages

In the **Read Messages** section you can read and delete received/stored SMS messages. The layout is simple, there is a list of received SMS messages and you can choose how many entries of that list should be visible at one time with SMS per page drop box in the top left corner of the page and there is a Search field to help you navigate more efficiently through the list of messages in the top right corner of the page.

∧ SMS MESSAGES

SMS per page

DATE	SENDER	STATUS	MESSAGE
------	--------	--------	---------

There are no messages

REFRESH

DELETE

DELETE ALL

Send Messages

The **Send Messages** section lets you send SMS messages from the router's SIM card.

∧ SEND SMS MESSAGE

Phone number

Message

RESET

SEND

All you have to do is enter the recipient's phone number, type in your message and hit the **Send** button.

Storage

In the Storage tab you can find settings associated with message storage.

INTERNAL MODEM SIM CONFIGURATION

Save messages to

Memory Used: 18 Available: 50

Leave free space

SAVE & APPLY

Field	Value	Description
Save messages to	SIM card Modem storage; default: SIM card	Specify location where to save messages
Memory	-	Information about used/available SIM card memory
Leave free space	integer; default: 5	How much memory (number of messages) should be left free