RUT200 Product Labels

 $\underline{\text{Main Page}} > \underline{\text{RUT Routers}} > \underline{\text{RUT200}} > \underline{\text{RUT200 Manual}} > \underline{\text{RUT200 Product Labels}}$

The information in this page is relevant from **005** batch.

Label/Print on the box



Information displayed after scanning OR code:	Information displayed after scanning SN Barcode:	Information displayed after scanning EAN Barcode:
SN:999999999;I:9999999999999;M:AABBCCDDEEFF;	·	4779051840229
▼ Text on the label/print OR or Barcode equivale	nt Docor	× iption
RUT200000000* -		ch product code the device was manufactured. Different product. For example, devices with different product
SERIAL SN	Serial number is a unique 10-digit device identifier. It i Remote Management System (RMS). The device can be RMS page	
IMEI I	The IMEI (International Mobile Equipment Identity) is cellular modules. GSM network operators use the IMEI	
LAN MAC M	The media access control (MAC) address is a unique id controller for communication in the data link layer (OS Ethernet LAN MAC address - MAC address of the LAN connecting the device to Teltonika's Remote Managem the System → Administration → RMS page	I layer2)
EAN -	The International Article Number (a.k.a. European Arti symbology and numbering system used in global trade packaging configuration, from a specific manufacturer	cle Number or <u>EAN</u>) is a standard describing a barcode to identify a specific retail product type, in a specific
BATCH NO: B	Batch number is a number that indicates the batch of \boldsymbol{n}	naterials

Label/Engraving on the product



 $Information \ displayed \ after \ scanning \ SN \ Barcode:$

999999999

×

Scanning the QR code with your mobile device should allow you to connect to the products WiFi.

Text on the label/engraving	QR or Barcode equivalent	Description
SERIAL	SN	Serial number is a unique 10-digit device identifier. It is required when connecting the device to Teltonika's Remote Management System (\underline{RMS}). The device can be added to RMS via the $\underline{System} \rightarrow \underline{Administration} \rightarrow \underline{RMS}$ page
IMEI	I	The IMEI (International Mobile Equipment Identity) is a unique 15 decimal digit number used to identify cellular modules. GSM network operators use the IMEI to identify devices in their networks
LAN MAC	М	The media access control (MAC) address is a unique identifier used to distinguish a network interface controller for communication in the data link layer (OSI layer2) Ethernet LAN MAC address - MAC address of the LAN Ethernet network interface. It is also required when connecting the device to Teltonika's Remote Management System (RMS). The device can be added to RMS via the $System \rightarrow Administration \rightarrow RMS$ page
WIFI SSID	S	The broadcasted SSID (Service Set Identifier) of the wireless network
WIFI PASSWORD	P	A custom passphrase used for authentication (at least 8 characters long)
USERNAME	U	A default value "admin" is used for product connection
PASSWORD	PW	A custom passphrase used for product connection (at least 8 characters long)
BATCH NO:	В	Batch number is a number that indicates the batch of materials