


# RUT300 Product Labels

[Main Page](#) > [RUT Routers](#) > [RUT300](#) > [RUT300 Manual](#) > **RUT300 Product Labels**


The information in this page is relevant from **021** batch.

## Label/Print on the box




Information displayed after scanning QR code:

SN:9999999999;M:AABBCCDDEEFF;B:999;




Information displayed after scanning SN Barcode:

9999999999







Information displayed after scanning EAN Barcode:

4779027312903



Text on the label/print	QR or Barcode equivalent	Description
RUT300000000*	-	Product code a.k.a., ordering code, displays under which product code the device was manufactured. Different product codes indicate different versions of the overall product. For example, devices with different product codes may support different LTE bands, come with different accessories, different firmware, etc. <b>*RUT300000000</b> is only for standard order codes
SERIAL	SN	Serial number is a unique 10-digit device identifier. It is required when connecting the device to Teltonika's Remote Management System ( <a href="#">RMS</a> ). The device can be added to RMS via the <b>System → Administration → RMS</b> page
LAN MAC	M	The media access control (MAC) address is a unique identifier used to distinguish a network interface controller for communication in the data link layer (OSI layer2) Ethernet LAN MAC address - MAC address of the LAN Ethernet network interface. It is also required when connecting the device to Teltonika's Remote Management System ( <a href="#">RMS</a> ). The device can be added to RMS via the <b>System → Administration → RMS</b> page
EAN	-	The International Article Number (a.k.a. European Article Number or <a href="#">EAN</a> ) is a standard describing a barcode symbology and numbering system used in global trade to identify a specific retail product type, in a specific packaging configuration, from a specific manufacturer
BATCH NO:	B	Batch number is a number that indicates the batch of materials

## Label/Engraving on the product

			
Information displayed after scanning QR code:		Information displayed after scanning SN Barcode:	
SN:9999999999;M:AABBCCDDEEFF;U:admin;PW:99999999;B:999;		9999999999	
			
Text on the label/engraving	QR or Barcode equivalent	Description	
SERIAL	SN	Serial number is a unique 10-digit device identifier. It is required when connecting the device to Teltonika's Remote Management System ( <a href="#">RMS</a> ). The device can be added to RMS via the <b>System → Administration → RMS</b> page	
LAN MAC	M	The media access control (MAC) address is a unique identifier used to distinguish a network interface controller for communication in the data link layer (OSI layer2) Ethernet LAN MAC address - MAC address of the LAN Ethernet network interface. It is also required when connecting the device to Teltonika's Remote Management System ( <a href="#">RMS</a> ). The device can be added to RMS via the <b>System → Administration → RMS</b> page	
USERNAME	U	A default value "admin" is used for product connection	
PASSWORD	PW	A custom passphrase used for product connection (at least 8 characters long)	
BATCH NO:	B	Batch number is a number that indicates the batch of materials	

Scanning the QR code with your mobile device should allow you to connect to the products WiFi.