

https://wiki.teltonika-networks.com/view/RUT955_Inverting_Relay_Output_Polarity

RUT955 Inverting Relay Output Polarity

[Main Page](#) > [RUT Routers](#) > [RUT955](#) > [RUT955 Hardware Application Examples](#) > **RUT955 Inverting Relay Output Polarity**

In some cases you might want to make RUT955's relay default state *high*. The problem is that when you reboot the router the router's relay goes back to its default state (*low*) for a short period of time. In this case if you want to constantly keep it in *high' state you could connect your load like shown in the picture below:*



For further information about relay control refer to this page:

<http://wiki.teltonika-networks.com/index.php?title=Input/Output>