RUT955 Product Labels

 $\underline{\text{Main Page}} > \underline{\text{RUT Routers}} > \underline{\text{RUT955}} > \underline{\text{RUT955 Manual}} > \mathbf{RUT955 \ Product \ Labels}$

The information in this page is relevant from **123** batch.

Label/Print on the box



Information displayed after scanning QR co	de: Information displayed after sca	anning SN Barcode: Information displayed after scanning EAN Barcode:
SN:999999999;I:999999999999;M:AA	BBCCDDEEFF;B:999; 9999999999	4779027311302
×	×	×
Text on the label/print QR or Bard	code equivalent	Description
RUT955T033B0* -	product codes indicate different	le, displays under which product code the device was manufactured. Different versions of the overall product. For example, devices with different product bands, come with different accessories, different firmware, etc. ndard order codes
SERIAL SN		it device identifier. It is required when connecting the device to Teltonika's (AS) . The device can be added to RMS via the (AS) and (AS) are (AS) .
IMEI I		quipment Identity) is a unique 15 decimal digit number used to identify operators use the IMEI to identify devices in their networks
LAN MAC M	controller for communication in t Ethernet LAN MAC address - MA	C address of the LAN Ethernet network interface. It is also required when a's Remote Management System (RMS). The device can be added to RMS via
EAN -		r (a.k.a. European Article Number or <u>EAN</u>) is a standard describing a barcode n used in global trade to identify a specific retail product type, in a specific specific manufacturer
BATCH NO: B	Batch number is a number that in	ndicates the batch of materials

Label/Engraving on the product



Information displayed after scanning QR code: M: AABBCCDDEEFF; U: admin; PW: 99999999; B: 999;

Information displayed after scanning SN Barcode:

999999999

×

Scanning the QR code with your mobile device should allow you to connect to the products WiFi.

Text on the label/engraving	QR or Barcode equivalent	Description
SERIAL	SN	Serial number is a unique 10-digit device identifier. It is required when connecting the device to Teltonika's Remote Management System (\underline{RMS}). The device can be added to RMS via the $\underline{System} \rightarrow \underline{Administration} \rightarrow \underline{RMS}$ page
IMEI	I	The IMEI (International Mobile Equipment Identity) is a unique 15 decimal digit number used to identify cellular modules. GSM network operators use the IMEI to identify devices in their networks
LAN MAC	М	The media access control (MAC) address is a unique identifier used to distinguish a network interface controller for communication in the data link layer (OSI layer2) Ethernet LAN MAC address - MAC address of the LAN Ethernet network interface. It is also required when connecting the device to Teltonika's Remote Management System (RMS). The device can be added to RMS via the $System \rightarrow Administration \rightarrow RMS$ page
WIFI SSID	S	The broadcasted SSID (Service Set Identifier) of the wireless network
WIFI PASSWORD	P	A custom passphrase used for authentication (at least 8 characters long)
USERNAME	U	A default value "admin" is used for product connection
PASSWORD	PW	A custom passphrase used for product connection (at least 8 characters long)
BATCH NO:	В	Batch number is a number that indicates the batch of materials