

RUT956 Logging in

[Main Page](#) > [RUT Routers](#) > [RUT956](#) > [RUT956 Manual](#) > **RUT956 Logging in**

Configure your computer (Windows)

1. Enable the wireless network connection (go to **Start** → **Control Panel** → **Network and Internet** → **Network and Sharing Center**. In the left panel click the **Change adapter settings** link. Right click on **Wireless Network Connection** and select **Enable**).



2. Setup wireless network adapter on your computer (right click on **Wireless Network Connection** and select **Properties**. After that select **Internet Protocol Version 4 (TCP/IP)** and click **Properties**).
3. Select **Obtain IP address** and **Obtain DNS server address automatically** if they are not selected. Click **OK**.



4. Right click on **Wireless Network Connection** and select **Connect** to see available wireless networks.



5. Choose the wireless network **RUT956_****** from the list and click **Connect**. Enter the WiFi password located on the device's label.

