

# RUTM10 Internet Status

[Main Page](#) > [RUTM Routers](#) > [RUTM10](#) > [RUTM10 Manual](#) > [RUTM10 WebUI](#) > [RUTM10 Network section](#) > **RUTM10 Internet Status**

The information in this page is updated in accordance with firmware version [RUTM\\_R\\_00.07.08.2](#).

□

## Contents

- [1 Summary](#)
- [2 Status](#)
- [3 Configuration](#)

## Summary

**Internet status** is a feature, also known as 'connchecker' which monitors the connectivity status of specified IPv4, IPv6, and DNS addresses. Repeatedly checks the connectivity status at specified intervals and reports changes.

---

If you're having trouble finding this page or some of the parameters described here on your device's WebUI, you should **turn on "Advanced WebUI" mode**. You can do that by clicking the "Advanced" button, located at the top of the WebUI.

✘

## Status

✘

Field	Value	Description
IPv4 status	Online   Offline   Untracked	<ul style="list-style-type: none"><li>• <b>Online</b> - address is reachable.</li><li>• <b>Offline</b> - address is unreachable.</li><li>• <b>Untracked</b> - address not provided in the configuration or tracking is disabled.</li></ul>
IPv6 status	Online   Offline   Untracked	<ul style="list-style-type: none"><li>• <b>Online</b> - address is reachable.</li><li>• <b>Offline</b> - address is unreachable.</li><li>• <b>Untracked</b> - address not provided in the configuration or tracking is disabled.</li></ul>
DNS status	Available   Unavailable   Untracked	<ul style="list-style-type: none"><li>• <b>Available</b> - DNS is reachable.</li><li>• <b>Unavailable</b> - DNS is unreachable.</li><li>• <b>Untracked</b> - DNS not provided in the configuration or tracking is disabled.</li></ul>

# Configuration



Field	Value	Description
Enable	off   on; default: <b>on</b>	Enable internet monitoring.
Track IPv4	ipv4; default: <b>1.1.1.1</b>	IPv4 address to be monitored.
Track IPv6	ipv6; default: <b>2a00:1450:4001:831::200e</b>	IPv6 address to be monitored.
Track domain	domain name; default: <b>dns.google.com</b>	Domain to be checked if alive.
Interval	seconds; default: <b>60</b>	The time interval in seconds at which the connectivity status should be checked.