

# RUTX08 LEDs

[Main Page](#) > [RUTX Routers](#) > [RUTX08](#) > [RUTX08 Manual](#) > **RUTX08 LEDs**

This page contains information the different types of LEDs and their behaviour on a RUTX08 device.



## Contents

- [1 Power LED](#)
- [2 Ethernet port LEDs](#)

## Power LED

The **power LED** is located on the bottom left corner of the front panel, just under the power connector.



It indicates whether the device is powered on or not.

	State	Description
LED turned on		Device is powered on.
LED turned off		Device is not powered on.

## Ethernet port LEDs

There are two **LEDs** located at the top of each **Ethernet port**.



They provide information on the current states of the Ethernet ports. Each port has two LEDs:

- **Orange** - 10/100 Mbps connection
- **Green**- 1000 Mbps connection

Below is an explanation on the behaviours of green and orange LEDs.

	State	Description
LED on		A data connection on the port is operational (cable plugged in, end device visible, no data is being transferred).
LED off		No data connection on the port is operational (no cable, bad cable or end device not visible for some other reason (such as damaged network card)).
LED blinking		Connection established and data is being transferred over this port.