

# RUTX09 Firmware

[Main Page](#) > [RUTX Routers](#) > [RUTX09](#) > [RUTX09 Manual](#) > [RUTX09 WebUI](#) > [RUTX09 System section](#) > **RUTX09 Firmware**

The information in this page is updated in accordance with firmware version [RUTX\\_R\\_00.07.04.5](#).

□

## Contents

- [1 Summary](#)
- [2 RUTX09 Firmware](#)
- [3 Update Settings](#)
  - [3.1 Firmware verification](#)
  - [3.2 FOTA Configuration](#)
- [4 See also](#)

## Summary

The **Firmware page** can be used to check the current firmware version of the device and to upgrade the device's firmware - either from a local file or from server.

This chapter is an overview of the **Firmware** page for RUTX09 devices.

If you're having trouble finding this page or some of the parameters described here on your device's WebUI, you should **turn on "Advanced WebUI" mode**. You can do that by clicking the "Basic" button under "Mode", which is located at the top-right corner of the WebUI.



MODE    USER    FW VERSION  
BASIC    ADMIN    RUTX\_R\_00.07.00    LOGOUT ↗

## RUTX09 Firmware

New firmwares are periodically uploaded to this Wiki. To download firmware images for RUTX09 devices, click [here](#).

The name of the image file can provide some basic information about the firmware. Names for RUTX09 firmware image files are structured as so:

<SERIES>\_<TYPE>\_<VERSION>\_WEBUI.bin

**example:** RUTX\_R\_00.00.00.bin

Where:

- **<SERIES>** - the series of the device. For RUTX09 devices, the SERIES string should always be **RUTX**

- **<TYPE>** - indicates the type of the firmware image. Possible values are:
  - **R** - release. These versions usually undergo extensive testing and are fitted for mass distribution. This is also the only type of firmware that gets uploaded to the [downloads page](#)
  - **T\_R** - test release. A test firmware is usually compiled for internal testing purposes
  - **T\_DEV** - test development.
  - **T\_F** - test feature. A test feature firmware usually contains some new feature that is not present in the release version. However, unlike the release version, the feature version will not include other fixes, has not been thoroughly tested and approved for release
  - **T\_H** - test hotfix. Hotfixes are firmwares that contain a fix (usually one) for some issue present in the release version. They are compiled when a quick fix is required and usually nothing else in the release is changed
- **<VERSION>** - firmware version. The version part consists of 3 or 4 segments:
  - **first segment** indicates whether the firmware is standard or modified in some special way. If the first segment is **00**, it means the file is a standard Teltonika firmware image. If the first segment is anything else (e.g., **01**), it means this is a special version of the firmware, usually customized for specific customer
  - **other segments** indicate the firmware version number

## Update Settings

The **Update Settings** section is used to upgrade the device's firmware. Firmware can be upgraded either from server or from an image uploaded from your computer.

The figure below is an example of the Flash New Firmware Image section and the table below provides information on the fields contained in that section:

▼ CURRENT FIRMWARE INFORMATION

Firmware version	X_R_00.01.01.01
Firmware build date	2022-01-01 00:00:00
Internal modem firmware version	MODEM_FW_01.001.01.001
Kernel version	1.1.111

▼ FIRMWARE AVAILABLE ON SERVER

Firmware version	No update available
Internal modem	No update available

▼ FLASH NEW FIRMWARE IMAGE

Update from File ^

Keep settings  off on

Image BROWSE

Field	Value	Description
Upgrade from	File   Server; default: <b>File</b>	Source of the firmware image. Can be either downloaded from FOTA (Server) or uploaded from a computer (File).
Keep settings	off   on; default: <b>on</b>	Ensures that all of the current device settings will be kept after the firmware upgrade.
Image	- (interactive button)	Click to browse your computer for a firmware image file.

## Firmware verification

When you upload a firmware image, the device will have to verify the validity of that image. If the verification was successful, you will be redirected to window with a message such as this:

∨ FLASH NEW FIRMWARE IMAGE

---

**CONFIGURATION SETTINGS**

Configuration files will be erased.

**VALIDATION SUCCEEDED**

Below is the checksum and file size listed, compare them with the original file to ensure data integrity.

**Checksums:**

**MD5:** b9d50c24091c8a8b5adad7a4bc05eb55

**SHA256:** 32b9226a5a426368ddd71fb24f8a371563f7e5d77603c1fed24a4c4c1d1e3eab

**Size:** 20.31 MB available

**AUTHORIZED FIRMWARE**

Uploaded firmware is digitally signed and authorized by Teltonika Networks.

CANCEL

PROCEED

This means that the uploaded firmware image is compatible with your device. The indication also displays the file's Checksum. A **checksum** is a sequence of hexadecimal symbols generated after running an algorithm called a cryptographic hash function on a file. Calculating a checksum and comparing it with the one provided by the file source can be used as a file authenticity check method.

If everything is in order, you can click the **Proceed** button to begin the update or click **Cancel** to abort.

On the other hand, if the uploaded a firmware file that is incompatible with your device, you will see an indication such as this:



## FOTA Configuration

---

FOTA stands for **firmware over the air**. Here you can enable or disable this feature.

∨ FOTA SERVICE SETTINGS

---

Enable FOTA  off on

SAVE & APPLY

## See also

Teltonika provides a software development kit (SDK) for their Networking products' firmwares under the General Public Licence (GPL). This enables the user to modify the firmware in any way according to their liking. Downloads and other related information can be found [here](#).