

RUTX09 Hotspot

[Main Page](#) > [RUTX Routers](#) > [RUTX09](#) > [RUTX09 Manual](#) > [RUTX09 WebUI](#) > [RUTX09 Services section](#) > **RUTX09 Hotspot**

The information in this page is updated in accordance with firmware version [RUTX_R_00.07.06.10](#).



Contents

- [1 Summary](#)
- [2 General](#)
 - [2.1 Hotspot Instances](#)
 - [2.1.1 General Settings](#)
 - [2.1.1.1 General](#)
 - [2.1.1.2 Advanced](#)
 - [2.1.1.3 Radius](#)
 - [2.1.1.4 Walled Garden](#)
 - [2.1.1.5 URL Parameters](#)
 - [2.1.1.6 User Scripts](#)
- [3 Local Users](#)
- [4 Landing Page](#)
 - [4.1 General Settings](#)
 - [4.2 Themes](#)
 - [4.2.1 Images](#)
 - [4.2.2 Style Settings](#)
 - [4.2.3 View Settings](#)
 - [4.2.4 Custom Theme](#)
- [5 User Groups](#)
- [6 User Management](#)

Summary

On Teltonika Networks devices a **Hotspot** is a service that provides authentication, authorization and accounting for a network. This chapter is an overview of the Hotspot section for RUTX09 devices.

General

Hotspot Instances

The **Hotspot Instances** section displays the main parameters of your Hotspot. By default, a Hotspot instance does not exist on the device. To create a new instance and begin configuration:

- 1. select an 'Interface';
- 2. click the 'Add' button;



After this, a new Hotspot configuration window will appear.

General Settings

The **General Settings** window is where most of the Hotspot configuration takes place. Look to the sub-sections below for information on configuration fields found in the General Settings sections.

General



Field	Value	Description
Configuration profile	Cloud4wi Default Hotspotsystems Purple portal; default: Default	Pre-configures Hotspot settings according to the selected service provider.
Enable	off on; default: on	Turns the Hotspot instance on or off.
Hotspot Network	ip/netmask; default: 192.168.2.0/24	IP address and subnet of the Hotspot network.
IP Address	ip; default: 192.168.2.254	Defines the IP address of your Hotspot router in network.
Authentication mode	Radius Local user SMS OTP MAC auth ; default: Local users	Authentication mode defines how users will connect to the Hotspot.
Allow signup	off on ; default: off	Allows users to sign up to hotspot via landing page.
Expiration time	integer; default: 0	User credential expiration time. Applies to users who signed up via landing page.
Users group	user group; default: default	The user group to which users signed up via landing page should be assigned to.
Landing Page	Internal External ; default: Internal	If external Landing Page is chosen, new section, to enter website address, will appear, e.g., <i>http://www.example.com</i>
UAM Port	integer; default: 3990	Port to bind for authenticating clients.
UAM Secret	string; default: none	Shared secret between uamserver and hotspot.
Success page	Success Page Original URL Custom; default: Success page	Location to return to after successful authentication.

Advanced



Field	Value	Description
Additional interfaces	Available interfaces; default: none	Shows additional interfaces that can be attached to hotspot instance.
Logout address	ip; default: 1.0.0.0	An address that can be used by users to logout from the Hotspot session.
Protocol	HTTP HTTPS; default: HTTP	Protocol to be used for landing page.
Enable TOS	off on; default: off	Enables Terms of Service (ToS) requirement. Client device will be able to access the Internet only after agreeing ToS.
Trial access	off on ; default: off	Enables trial internet access for a specific group.
Trial access: Group	User group; default: default	Group of trial users.
HTTPS to landing page redirect	off on ; default: off	Redirect initial pre-landing page HTTPS requests to hotspot landing page.
Certificate files from device	off on; default: off	Specified whether to upload key & certificate files from computer or to use files generated on this device via the <i>System → Administration → Certificates</i> page.
SSL key file	key file; default: none	Upload/select SSL key.
SSL certificate file	certificate file; default: none	Upload/select SSL certificate.
DNS server 1	ip; default: 8.8.8.8	Additional DNS servers that are to be used by the Hotspot.
DNS server 2	ip; default: 8.8.4.4	Additional DNS servers that are to be used by the Hotspot.

Radius

Radius authentication mode uses an external RADIUS server, to which you have to provide an address to, instead of using the router's Local Authentication. If you are using Local authentication, this section is not visible.



Field	Value	Description
RADIUS server #1	ip; default: none	The IP address of the RADIUS server #1 that is to be used for Authenticating your wireless clients.
RADIUS server #2	ip; default: none	The IP address of the RADIUS server #2 that is to be used for Authenticating your wireless clients.
Authentication port	integer [0..65535]; default: 1812	RADIUS server authentication port.

Accounting port	integer [0..65535]; default: 1813	RADIUS server accounting port.
NAS identifier	string; default: none	NAS-Identifier is one of the basic RADIUS attributes.
Radius secret key	string; default: none	The secret key is a password used for authentication with the RADIUS server.
Swap octets	off on; default: off	Swaps the meaning of input octets and output as it relates to RADIUS attributes.
Location name	string; default: none	Custom location name for your Hotspot.
Location ID	string; default: none	Custom location ID for your Hotspot.

Walled Garden

You can add a list of addresses that users connected to the Hotspot will be able to reach without any authentication. By default this list is empty. Simply write addresses into the Address List.

Format of address is **website.com** (does not include <https://www>).



URL Parameters

The **URL parameters** section becomes visible when **Landing page** is selected as **External** in [General settings](#) section.



Field	Value	Description
UAM IP	string; default: none	The IP Address of the Captive Portal gateway.
UAM port	string; default: none	The port on which the Captive Portal will serve web content.
Called	string; default: none	The MAC address of the IP Address of the Captive Portal gateway.
MAC	string; default: none	The MAC address of the client trying to gain Internet access.
NAS id	string; default: none	An identification for the Captive Portal used in the RADIUS request.
Session id	string; default: none	The unique identifier for session.
User url	string; default: none	The URL which the user tried to access before he were redirected to the Captive Portal's URL's pages.
Challenge	string; default: none	A challenge that should be used together with the user's password to create an encrypted phrase used to log on.
Custom 1	string; default: none	Add custom name and custom value which will be displayed in url parameters.
-	SSID Hostname FW version --Custom--; default: SSID	-

Custom 2 string; default: **none**

Add custom name and custom value which will be displayed in url parameters.

- SSID | Hostname | FW version
| --Custom--; default: **SSID** -

User Scripts

In this section you can add custom **Scripts** that will be executed after a session is authorized in the **Session up** section, after session has moved from authorized state to unauthorized in the **Session down** section and after a new user has been signed up in the **User signup** section.



Local Users

The **Local Users** section is used to create and manage users that can connect to the Hotspot. The elements comprising the Local Users page are explained in the list and figure below.

1. Entering a Username, Password and clicking the 'Add' button creates a new user.
2. The 'Group' dropdown menu assigns a user to another group.
3. The 'Edit' button lets you change a user's password or assign the user to another group.
4. The 'Delete[X]' button deletes a user.



Landing Page

This section is used to define how your Hotspot's **Landing Page** will look like to connecting users.

General Settings

General Settings section lets you choose the authentication protocol and theme that will be used in the Landing Page. You can download more themes using the [Package Manager](#)



Themes

The **Themes** section displays all available Landing Page themes. In order to download a theme, click the 'Download' button, in order to edit a theme, click the 'Edit' button next to it.




Images

The **Images** section allows you to upload custom images to different objects.



Style Settings

Pressing edit button  next to style settings lets you edit how your landing page will look visually using CSS syntax.



View Settings

In **View Settings** you can access and modify default templates for various parts of landing page and edit their HTML code.



Custom Theme

To use custom theme you can download default theme and edit it's content. Then use upload button to upload it.



User Groups

User Groups provides the possibility to set different connection limits for different users. A group called 'default' is already created and does not have any limitations set by default. You can

1. create a new group by entering a custom Name and clicking 'Add'
2. or configure the existing rule by clicking the 'Edit' button next to it.



A group's settings page will look similar to this:



Field	Value	Description
Idle timeout	integer; default: none	A timeout in seconds after which idle users are automatically disconnected from the Hotspot. (0 means unlimited.)
Time limit	integer; default: none	Disables hotspot user after time limit in sec is reached. (0, meaning unlimited)

Download bandwidth	integer; default: none	Maximum download bandwidth that the users assigned to this template can achieve. Bandwidth can be specified in Mbit/s.
Upload bandwidth	integer; default: none	Maximum upload bandwidth that the users assigned to this template can achieve. Bandwidth can be specified in Mbit/s.
Download limit	integer; default: none	A received data limit that the users assigned to this template can reach. After the data limit is reached, the user will lose data connection. Download limit is specified in MB.
Upload limit	integer; default: none	A sent data limit that the users assigned to this template can reach. After the data limit is reached, the user will lose data connection. Upload limit is specified in MB.
Warning	integer; default: none	Send an SMS warning to hotspot user after warning value of download or upload data in MB is reached. Only works with SMS OTP authentication.
Period	Month Week Day; default: Month	The beginning of the period during which the restriction specified in this section will apply. After the period is over, all specified limits are reset.
Start day	integer [1..31] Monday..Sunday integer [1..24]; default: 1	Choices changes depending on what 'Period' was chosen. Specifies which day of the month, week or hour of the day the limits will be reset.

User Management

The **Current Hotspot Users** tab displays the status and session statistics of currently logged in users. You can also "kick" (deauthenticate) a user by clicking the 'Logout' button next to it.



The **Registered Hotspot Users** tab displays the data of unique users that have registered to the hotspot before.

