

RUTX09 Overview

[Main Page](#) > [RUTX Routers](#) > [RUTX09](#) > [RUTX09 Manual](#) > [RUTX09 WebUI](#) > [RUTX09 Status section](#) > **RUTX09 Overview**

The information in this page is updated in accordance with firmware version [RUTX_R_00.07.04.5](#).

□

Contents


- [1 Summary](#)
- [2 Overview](#)
 - [2.1 Mobile widget](#)
 - [2.2 Widget button: Info](#)
 - [2.3 Widget button: Settings](#)

Summary

The **Overview** page contains various information summaries and shortcuts to other pages. It is also the homepage of the WebUI. This chapter is an overview of the Overview page for RUTX09 router. If you're having trouble finding this page or some of the parameters described here on your device's WebUI, you should **turn on "Advanced WebUI" mode**. You can do that by clicking the "Basic" button under "Mode", which is located at the top-right corner of the WebUI.

Overview

The Overview page contains **widgets** that display the status of various systems related to the device. The figure below is an example of the Overview page:

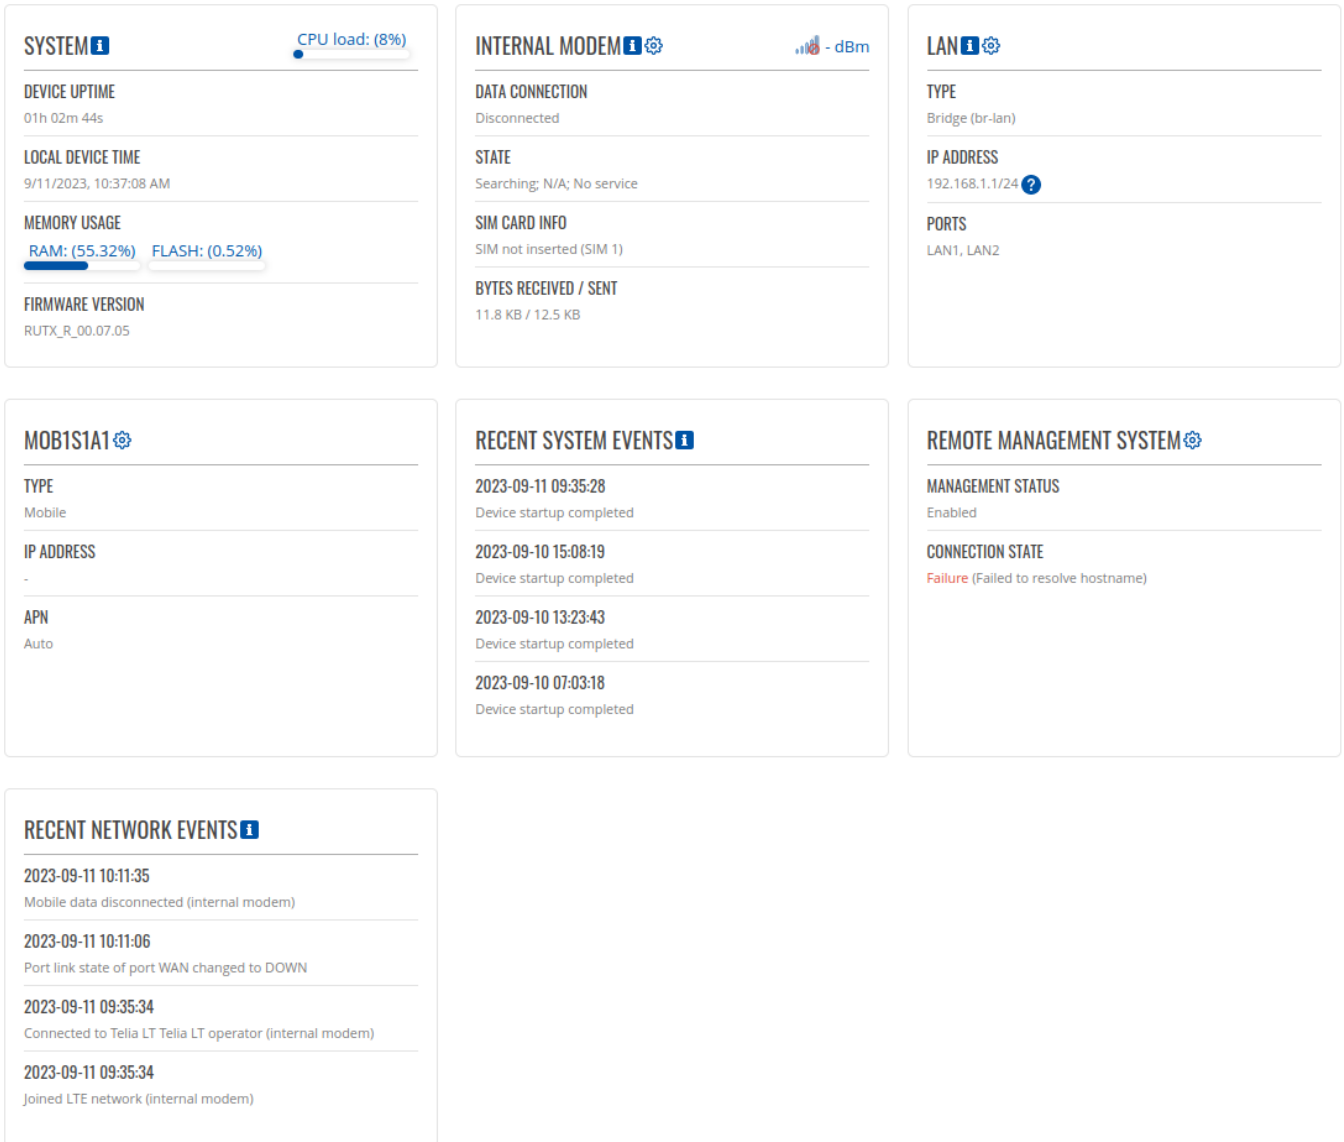

Mobile widget

The **Mobile** widget displays information related to the mobile connection and the current **signal strength** (📶). Each filled-up bar represents a different RSSI value:

bars	signal strength value / RSSI (in dBm)
0	≤ -111
1	-110 to -97
2	-96 to -82
3	-81 to -67
4	-66 to -52
5	≥ -51

The same calculation principle applies to the **Signal strength LEDs** located on your device. You can find more information on signal strength values and different measurements [here](#).

Widget button: Info

The **Info** (i) button is located next to the name of some widgets. Clicking the Info button redirects the user to a status page related to the widget's displayed information. For example, clicking the Info button on the System widget would redirect the user to the **Status** → [System](#) page:

The screenshot shows a 'SYSTEM' widget on the left with an 'Info' button (i) and a red arrow pointing to the 'SYSTEM' status page on the right. The widget displays: Router uptime (0h 1m 50s), Local device time (2019-06-14, 14:41:25), Memory usage (RAM: 49.75%, FLASH: 0.79%), and Firmware version (RUTX_R_00.01.04.5). The status page shows details for DEVICE, MODEM, SYSTEM, and MEMORY.

DEVICE	MODEM	SYSTEM	MEMORY
DEVICE NAME RUTX11	MODEL EG06	FIRMWARE VERSION RUTX_R_00.01.04.5	USED 144.7 MB / 250.6 MB (58%)
PRODUCT CODE RUTX11000000	IMEI 86870303661276	KERNEL VERSION 3.14.77	BUFFERED 0.8 MB / 230.6 MB (4%)
SERIAL NUMBER 110220071	FW VERSION EG06LANS000000	LOCAL DEVICE TIME 2019-06-14, 10:35:51	
HARDWARE REVISION 0002		UPTIME 0h 29m 24s	
BATCH NUMBER 0002		LOAD AVERAGE 0.26 0.09 0.11	

Widget button: Settings

The **Settings** button is located next to the name of some widgets. Clicking the Settings button redirects the user to a configuration page related to the widget's displayed information. For example, clicking the Info button on the Mobile widget would redirect the user to the *Network* → *Interface* → *LAN Configuration* page:

The screenshot shows a 'LAN' widget on the left with a 'Settings' button (gear icon) and a red arrow pointing to the 'INTERFACES: LAN' configuration page on the right. The widget displays: TYPE (wired (br-lan)), IP ADDRESS (192.168.1.1/24), and FAILOVER (Disabled). The configuration page shows fields for IPv4 address (192.168.1.1), IPv4 netmask (255.255.255.0), IPv4 gateway (0.0.0.0), and DNS servers, along with a 'Use WAN port as LAN' toggle switch.