

# RUTX10 LEDs

[Main Page](#) > [RUTX Routers](#) > [RUTX10](#) > [RUTX10 Manual](#) > **RUTX10 LEDs**

This page contains information the different types of LEDs and their behaviour on a RUTX10 device.



## Contents

- [1 Power LED](#)
- [2 WiFi band LEDs](#)
- [3 Ethernet port LEDs](#)

## Power LED

The **power LED** is located on the bottom left corner of the front panel, just under the power connector.



It indicates whether the device is powered on or not.

	State	Description
LED turned on		Device is powered on.
LED turned off		Device is not powered on.

## WiFi band LEDs

The **WiFi band LEDs** are located at the bottom of the front panel of the device, to the left of the Ethernet ports.



They display whether a WiFi Access Point (AP) is active on a specific band.

	State	Description
2.4 LED turned on.		At least one 2.4 GHz Access Point is running.
2.4 LED turned off		No 2.4 GHz Access Points are running.
5 LED turned on		At least one 5 GHz Access Point is running.
5 LED turned off		No 5 GHz Access Points are running.

## Ethernet port LEDs

There are two **LEDs** located at the top of each **Ethernet port**.



They provide information on the current states of the Ethernet ports. Each port has two LEDs:

- **Orange** - 10/100 Mbps connection
- **Green**- 1000 Mbps connection

Below is an explanation on the behaviours of green and orange LEDs.

	<b>State</b>	<b>Description</b>
LED on		A data connection on the port is operational (cable plugged in, end device visible, no data is being transferred).
LED off		No data connection on the port is operational (no cable, bad cable or end device not visible for some other reason (such as damaged network card)).
LED blinking		Connection established and data is being transferred over this port.