

RUTX12 Overview

[Main Page](#) > [RUTX Routers](#) > [RUTX12](#) > [RUTX12 Manual](#) > [RUTX12 WebUI](#) > [RUTX12 Status section](#) > **RUTX12 Overview**

The information in this page is updated in accordance with firmware version [RUTX_R_00.07.08.1](#).

□

Contents

- [1 Summary](#)
- [2 Overview](#)
 - [2.1 Mobile widget](#)
 - [2.2 Widget button: Info](#)
 - [2.3 Widget button: Settings](#)
 - [2.4 Adding more widgets](#)

Summary

The **Overview** page contains various information summaries and shortcuts to other pages. It is also the homepage of the WebUI. This chapter is an overview of the Overview page for RUTX12 router. If you're having trouble finding this page or some of the parameters described here on your device's WebUI, you should **turn on "Advanced WebUI" mode**. You can do that by clicking the "Advanced" button, located at the top of the WebUI.

✖

Overview

The Overview page contains **widgets** that display the status of various systems related to the device. The figure below is an example of the Overview page:

✖

Mobile widget


The **Mobile** widget displays information related to the mobile connection and the current **signal strength** (✖). Each filled-up bar represents a different RSSI value:

| bars | signal strength value / RSSI (in dBm) |
|------|---------------------------------------|
| 0 | ≤ -111 |
| 1 | -110 to -97 |

| | |
|---|------------|
| 2 | -96 to -82 |
| 3 | -81 to -67 |
| 4 | -66 to -52 |
| 5 | ≥ -51 |

The same calculation principle applies to the **Signal strength LEDs** located on your device. You can find more information on signal strength values and different measurements [here](#).

Widget button: Info

The **Info**  button is located next to the name of some widgets. Clicking the Info button redirects the user to a status page related to the widget's displayed information. For example, clicking the Info button on the System widget would redirect the user to the **Status** → [System](#) page:



Widget button: Settings

The **Settings** button is located next to the name of some widgets. Clicking the Settings button redirects the user to a configuration page related to the widget's displayed information. For example, clicking the Info button on the Mobile widget would redirect the user to the *Network* → *LAN Configuration* page:



Adding more widgets

There is a default set of widgets displayed in the Overview page, but more can be added by clicking **Overview Settings** button.



From here you can add non-default widgets.

