

# Serial Interface Control Commands TRM240

[TRM240 AT Commands](#) > [Serial Interface Control Commands TRM240](#)

□

## Contents

- [1 Serial Interface Control Commands](#)
  - [1.1 AT&C Set DCD Function Mode](#)
  - [1.2 AT&D Set DTR Function Mode](#)
  - [1.3 AT+IFC Set TE-TA Local Data Flow Control](#)
  - [1.4 AT+IFC Set TE-TA Local Data Flow Control](#)
  - [1.5 AT+IPR Set TE-TA Fixed Local Rate](#)
  - [1.6 AT+QRIR Restore RI Behaviorto Inactive](#)

## Serial Interface Control Commands

### [AT&C Set DCD Function Mode](#)

---

The command controls the behavior of the UE's DCD (data carrier detection) line.

### [AT&D Set DTR Function Mode](#)

---

The command determines how the UE responds if DTR line is changed from lowto highlevelduring data mode.

### [AT+IFC Set TE-TA Local Data Flow Control](#)

---

The command determines the flow control behavior of the serial port.

### [AT+IFC Set TE-TA Local Data Flow Control](#)

---

The command determines the serial interface character framing format and parity received by TA from TE.

## **[AT+IPR Set TE-TA Fixed Local Rate](#)**

---

The command is used to query and set the baud rate of the UART. The default baud rate value (<rate>) is 115200bps. The setting of <rate> will not be restored with **AT&F**.

## **[AT+QRIR Restore RI Behaviorto Inactive](#)**

---

If the RI (ring indicator) behavior is "always", it can be restored to inactive by the Execution Command. The RI behavior is controlled by **AT+QCFG**. Please refer to **AT+QCFG="urc/ri/ring"**, **AT+QCFG="urc/ri/sms incoming"** and **AT+QCFG="urc/ri/other"** for more details.