

TAP200 RMS

[Main Page](#) > [TAP Access Points](#) > [TAP200](#) > [TAP200 Manual](#) > [TAP200 WebUI](#) > [TAP200 System section](#) > **TAP200 RMS**

The information in this page is updated in accordance with firmware version [TAP200_R_00.07.08](#).

□

Contents

- [1 RMS](#)

RMS

RMS (Remote Management System) is a cloud system designed by Teltonika and intended for remote monitoring and management of [Teltonika-Networks products](#).

In order to add a device(s) to RMS, get yourself acquainted by watching [this instructional video](#) and register an account by [clicking here](#). **Each unique device receives a free month-long RMS license** when added to RMS for the first time.

The figure below is a screenshot of the RMS section taken from a device which has been connected to RMS:

✖

Field	Value	Description
Connection type	Enabled Standby Disabled; default: Enabled	Defines how the device will connect to RMS: <ul style="list-style-type: none">• Enabled - the device attempts to connect to RMS every 2-5 minutes (every 2 minutes the first hour; then every 5 minutes). If it cannot connect for 14 days, it will enter Standby mode.• Standby - the device attempts to connect to RMS every 6 hours.• Disabled - RMS functionality is disabled.
Hostname	host ip; default: rms.teltonika.lt	Address of the RMS server. If you're using regular RMS, just leave the default address (<i>rms.teltonika.lt</i>).
Port	integer [0..65535]; default: 15009	Port number for connecting to RMS. If you're using regular RMS, just leave the default port (<i>15009</i>).

The RMS server waits for incoming connections. Since the device attempts to connect at a fixed interval, it may not connect instantly after you add it to RMS. While it is disconnected, you can check

how much time is left until the next connection attempt in the Status section:



To speed up the process by initiating an immediate connection attempt, click the **Connect** button. Alternatively, when the device is already connected a **Disconnect** button becomes visible. Use it to terminate the device's connection to RMS.



For more information on Teltonika Networks Remote Management System (RMS) refer to the [RMS Manual](#) or [RMS FAQ](#) pages.