

# TRB500 Other

[Main Page](#) > [TRB Gateways](#) > [TRB500](#) > [TRB500 Manual](#) > [TRB500 WebUI](#) > [TRB500 Network section](#) > **TRB500 Other**

The information in this page is updated in accordance with firmware version [TRB5\\_R\\_00.07.08](#)

**Note: Firmware versions before TRB5\_R\_00.07.04.4 will not be supported by devices from batch 09 and higher..**

□

## Contents

- [1 Summary](#)
- [2 UDP Broadcast Relay](#)

## Summary

The **Other** page is used to to set up UDP Broadcast relay.

This manual page provides an overview of Other page in TRB500 devices.

If you're having trouble finding this page or some of the parameters described here on your device's WebUI, you should **turn on "Advanced WebUI" mode**. You can do that by clicking the "Advanced" button, located at the top of the WebUI.

✘

## UDP Broadcast Relay

The **UDP Broadcast Relay** will listen for broadcast traffic on the specified interface port and relay that traffic to the specified interface(s).

**Note:** *UDP Broadcast Relay is additional software that can be installed from the **System** → [Package Manager](#) page.*

The Static Lease list is empty by default. To add a new Static Lease click the 'Add' button.

✘

Appears static lease, which should look similar to this:

✘

**Field**

**Value**

**Description**

Source interface	lan ; default: <b>lan</b>	The interface from which the traffic will be redirected to.
Port	integer [0..65535]; default: <b>none</b>	Specify a port which the UDP broadcast relay will listen on for incoming packets to relay.
Destination interface	lan ; default: <b>none</b>	UDP broadcast relay destination interfaces. Open port 137 in firewall so LAN could be reachable from WAN.
Enable	off   on; default: <b>off</b>	Turns UDP Broadcast Relay on or off.