

Template:Networking rut955 manual input output input rule table

Field	Value	Description
Enable	yes no; default: yes	Turns the input rule on or off.
Input type	Digital Digital isolated Analog; default: Digital	Selects to which input pin the rule will apply.
Trigger	Input open Input shorted Both; default: Input open	Selects which input state will trigger the rule.
Action	Send SMS Change SIM card Send email Change profile Turn on WiFi Turn off WiFi Reboot Activate output HTTP POST/GET; default: Send SMS	<p>The action that will be taken when the rule is triggered.</p> <ul style="list-style-type: none">• Send SMS - sends an SMS message to a specified number(s) or user group. The message text is custom.• Change SIM card - switches to using the SIM card that is currently not in use.• Send email - sends an email to the specified address(es). You will be prompted to enter your email account's authentication information.• Change profile - switches to using another configuration profile. Configuration profiles can be created via the <i>System</i> → <i>[[{{{name}}}] Profiles Profiles]]</i> page.• Turn on WiFi/Turn off WiFi - turns WiFi on or off.• Turn on RMS/Turn off RMS - turns Remote Management System on or off.• Reboot - reboots the router when a specified amount of time passes or instantly after the trigger occurrence.• Activate output - activates the specified router output.• HTTP POST/GET - executes an HTTP POST or HTTP GET action.