## Template:Networking trb2xx manual signal strength leds

## Signal strength LEDs

The **signal strength LEDs** are located on the right side of the back panel:

 $[[File:{\{\{file\_sig\_led\}\}\}|\{\{\{size\_sig\}\}\}px]]}$ 

Each lit up LED represents a different value of the gateways current signal strength in RSSi:

	No. of lit up LEDs		Signal strength value
0		≤ -111 dBm	
1		-110 dBm to -82 dBm	
2		-81 dBm to -52 dBm	
3		≥ -51 dBm	