

Template:Webui services rs232 rs232 configuration modbus gateway table

field name	value	description
Listening IP	ip; Default: 0.0.0.0	IP address on which the Modbus gateway will wait for incoming connections
Port	integer [0..65535]; Default: 502	Port number used to listen for incoming connections
Slave ID configuration	User defined Obtained from TCP; Default: User defined	Specifies whether slave IDs should be user defined or automatically obtained from TCP
Slave ID/Permitted slave IDs	integer range of integers multiple integers; Default: 1/1-247	Slave ID or range of permitted slave IDs. The way this field is named and its function depends on the value of the "Slave ID configuration" field. A range of IDs can be specified by placing a hyphen (-) between two integer numbers. For example, if you permit slave IDs in the range of 10 to 20, you would specify it as: 10-20 You can also specify multiple values that are not connected in a range using commas (,) . For example, to specify 6, 50 and 100 as permitted slave IDs, you would have to use: 6,50,100