

# Template:Webui services rs232 rs232 configuration modem table

field name	value	description
Direct connect	ip:port   host:port; Default: <b>none</b>	Maintains a constant connection to the specified host. Leave empty if you are planning to use an ATD command to initiate the connection
TCP port	integer [0..65535]; Default: <b>none</b>	Internal TCP port number used to listen for incoming connections. Leave it empty to disable incoming connections
Initiation string*	string; Default: <b>none</b>	A command string that will be sent to the modem to initiate the connection in some particular way (optional)
No extra CR LF in response	yes   no; Default: <b>no</b>	Removes extra CR LF before response code; removes LF after response code

\* This is the AT command set used in Modem mode of the serial interfaces:

command	description	usage
A	Answers an incoming call	To answer incoming connection: <b>ATA</b>
D	Dials a number	To initiate data connection: <b>ATD &lt;HOST&gt;:&lt;PORT&gt;</b> To enter data mode with Direct connect settings: <b>ATD</b>
E	Local echo	Turn local echo ON: <b>ATE1</b> Turn local echo OFF: <b>ATE0</b>
H	Hang up current call	To end data connection: <b>ATH</b>
O	Return to data mode	To return to data mode from command mode: <b>ATO</b>
Z	Reset to default configuration	To reset the modem to default configuration: <b>ATZ</b>