

RUT956 Input/Output

[Main Page](#) > [RUT Routers](#) > [RUT956](#) > [RUT956 Manual](#) > [RUT956 WebUI](#) > [RUT956 Services section](#) > **RUT956 Input/Output**

The information in this page is updated in accordance with firmware version [RUT9M_R_00.07.04.5](#).

□

Contents

- [1 Summary](#)
- [2 Physical characteristics and I/O pin mapping](#)
 - [2.1 Power Socket Pinout](#)
 - [2.2 Input/Output Connector Pinout](#)
- [3 Status](#)
 - [3.1 Status from command line](#)
- [4 Post/Get](#)
 - [4.1 Post/Get examples](#)
 - [4.1.1 Setting](#)
 - [4.1.2 Reading](#)
- [5 Scheduler](#)
- [6 I/O Juggler](#)
 - [6.1 General](#)
 - [6.1.1 Input](#)
 - [6.2 Actions](#)
 - [6.2.1 Type: Email](#)
 - [6.2.2 Type: Output](#)
 - [6.2.3 Type: HTTP](#)
 - [6.2.4 Type: Script](#)
 - [6.2.5 Type: Reboot](#)
 - [6.2.6 Type: Profile](#)
 - [6.2.7 Type: RMS](#)
 - [6.2.8 Type: MQTT](#)
 - [6.2.9 Type: SIM switch](#)
 - [6.2.10 Type: SMS](#)
 - [6.2.11 Type: WiFi](#)
 - [6.3 Conditions](#)
 - [6.3.1 Condition type: I/O](#)
 - [6.3.2 Condition type: Analog voltage](#)
 - [6.3.3 Condition type: Boolean group](#)
 - [6.3.4 Condition types: Date/Time](#)

Summary

Inputs and **outputs** are used for monitoring and controlling a connected device or receiving signals from that device in order to trigger certain events.


This chapter of the user manual provides an overview of the Input/Output section for RUT956 devices.

If you're having trouble finding this page or some of the parameters described here on your device's WebUI, you should **turn on "Advanced WebUI" mode**. You can do that by clicking the "Basic" button under "Mode", which is located at the top-right corner of the WebUI.

Physical characteristics and I/O pin mapping

Electrical characteristics and I/O pin mapping information are presented below.

Power Socket Pinout

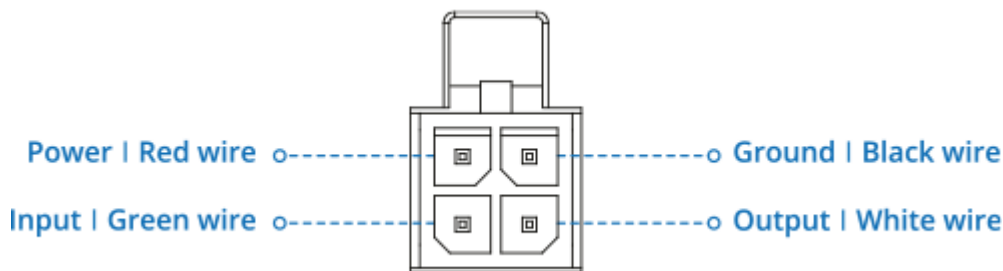

- **Power:** 9-30 VDC positive (+).
- **Ground:** negative/ground (-).
- **Input:** digital non-isolated input.
 - *logical low level:* 0 - 5 V;
 - *logical high level:* 8 - 30 V.
- **Output:** digital open collector (OC) output; 30 V, 300 mA.

Input/Output Connector Pinout



- **DI₁** and \square_1 - Digital input (dry type):
 - 0-1.2 V is detected as logical "1"
 - 1.8-3 V is detected as logical "0"
- **DI₂** and \square_2 - Digital galvanically isolated input:
 - 0-4 V is detected as logical "0"
 - 9-30 V is detected as logical "1"
- **DO** and \square_3 - Galvanically isolated open collector (OC) output: 30 V, 250 mA.

- **+V** and \square_3 - External VCC for **DO** (<30 V).
 - **C & NO** - Common and Normally Open contacts of the internal Non-Latching Relay respectively.
Maximum relay ratings: 4 A at 24 VDC, 4 A at 40 VAC.
 - **A** and \square_1 - ADC input. Analog voltage range: 0-24 V. The input can be configured for 4-20 mA sensor protocol as current measurement (ACL).*
 - \square_1 - GND for **DI**₁ and **A**.
 - \square_2 - GND for **DI**₂.
 - \square_3 - GND for **DO** pins.
 - **Note:** input circuit components have tolerance of +-1%.
-

* The deviation from the actual input voltage and the voltage measured by the device is dependent on the input voltage value:

- **≥ 1.5 V** - the deviation is about $\pm 10\%$ and gets lower when the input voltage increases towards 5 V
- **≥ 5 V** - the deviation does not exceed $\pm 3\%$
- **≥ 9 V** - the deviation does not exceed $\pm 2\%$

Additional note: the deviation values specified above are applicable in temperatures of < 50 °C. Under higher temperatures the deviation values become considerably higher.

Status

The **Status** page displays the current states of the device's input and output pins:



You can invert an Input pin by clicking the on/off slider under the "Inversion" column or switch the state of an Output pin by clicking the on/off slider under the "State" column.

Status from command line

You can also obtain the status of input and output pins via the command line (CLI or SSH). List of possible ubus values in RUT956 devices:

```
ioman.gpio.din1    - 4PIN input
ioman.gpio.dout1   - 4PIN output
ioman.gpio.din2    - Digital input (only for passive sensors)
ioman.gpio.dout2   - Galvanically isolated open collector output
ioman.relay.relay0 - Digital relay output
ioman.gpio.iio     - Digital galvanically isolated input
ioman.adc.adc0     - Analog input
ioman.acl.acl0     - Analog Current loop
```

Call command **ubus call value status** :

```
root@Teltonika-RUT956:~# ubus call ioman.gpio.din1 status
```

```
{
    "value": "0",
    "direction": "in",
    "bi_dir": false,
    "invert_input": false
}
```

- **din1** is the input:
 - "value": "0" means low level state.
 - "value": "1" means high level state.
- **dout1** is the output:
 - "value": "0" means low level state.
 - "value": "1" means high level state.
- **relay0** is the relay:
 - "state": "open" means open relay state.
 - "state": "closed" means closed relay state.

To change relay settings, use the **update** command and specify a state:

```
ubus call ioman.relay.relay0 update '{"state":"open"}'
ubus call ioman.relay.relay0 update '{"state":"closed"}'
```

Post/Get

Enabling **Post/Get** provides the possibility to control the state of an output via HTTP POST/GET requests. The figure below is an example of the Auth Settings section of the Post/Get page. It is used to turn Post/Get requests on or off and to set authentication parameters.

✓ I/O POST/GET SETTINGS

SAVE & APPLY

Field	Value	Description
Enable	off on; default: off	Turns Post/Get on or off.
Access	io_state io_type io_value; default: io_state, io_type, io_value	Accessible methods. It is considered that all methods are allowed if this list is empty.
Username	string; default: none	Username used for authentication in POST/GET queries.
Password	string; default: none	Password used for authentication in POST/GET queries.
Confirm password	string; default: none	Repeat the password for confirmation.

Post/Get examples

Use a web browser or any other compatible software to send HTTP POST/GET requests to the device.

Setting

Changing states of various I/O is possible using requests. Below is a table containing syntax examples of this usage:

Action	POST/GET URL
Turn Output state to high	<code>http://192.168.1.1/cgi-bin/io_state?username=user1&password=user1&pin=dout1&state=on</code>
Turn Output state to low after 5 seconds for 3 seconds	<code>http://192.168.1.1/cgi-bin/io_state?username=user1&password=user1&pin=dout1&state=on&delay=5&time=3</code>

Overview:

- 192.168.1.1 - device default LAN IP address; replace it in accordance with your own configuration.
- username - login name from Post/Get configuration.
- password- password from Post/Get configuration.
- state - turn Output on or off.
- delay - defines a delay (in seconds) after which the specified action will be performed.
- time - defines a window of time during which the action will take place. For instance, if you post an *on* action while specifying *time=5*, the output will turn on and stay on for 5 seconds before turning off.

Delay and time parameters can be used together. For example, if delay is 10, time is 5, action is on, then 10 seconds after the execution of the command, the output will switch to *on* (or stay in *on* state if it was already that way), then after 5 more seconds it will switch to *off* state. In this case the overall command execution time is 15 seconds.

To use Post/Get via SSH instead of a browser, you may want to use the ***curl -X*** command. Simply add the same URL command in between quotes and specify the HTTP method.

Examples:

- **Switch output to High:**

```
curl -X GET
"http://192.168.1.1/cgi-bin/io_state?username=user1&password=user1&pin=dout1&state=on"
```

- **Switch output to Low after delay:**

```
curl -X GET
"http://192.168.1.1/cgi-bin/io_state?username=user1&password=user1&pin=dout1&state=off&delay=5"
```

Reading

Getting the current state of various I/O is possible using requests. Usage is very similar to the examples above:

Examples:

- **Read state of digital output:**

```
curl -X GET
"http://192.168.1.1/cgi-bin/io_value?username=user1&password=user1&pin=dout1"
```

- **Read state of analog input (in voltage mode):**

```
curl -X GET
"http://192.168.1.1/cgi-bin/io_value?username=user1&password=user1&pin=adc0"
```

- **Read state of analog input (in current mode):**

```
curl -X GET
"http://192.168.1.1/cgi-bin/io_value?username=user1&password=user1&pin=ac10"
```

Scheduler

The output **Scheduler** can be used to configure a timetable of when an output should be turned on or off, based on days of the week or month and hours of the day. The General Configuration section is used to turn the Output Scheduler on or off.

^ GENERAL CONFIGURATION

Enable Scheduler

The Scheduler is configured in the form of **Instances**. A Scheduler Instance defines a time interval during which the state of an output associated with the instance will be set to "High". The Output Scheduler Instances list is empty by default. Click the 'Add' button in order to create a new Scheduler Instance:

^ OUTPUT SCHEDULER INSTANCES

PIN	TYPE	FROM	TO
-----	------	------	----

This section contains no values yet

ADD

SAVE & APPLY

After this you should be redirected to the configuration page for the newly added Instance which should look similar to this:

^ OUTPUT SCHEDULER INSTANCE CONFIGURATION

Enable off on

Pin

Interval Type

Start Day

Start Time

End Day

End Time

< BACK

SAVE & APPLY

Field	Value	Description
Enable	off on; default: off	Turns the Scheduler Instance on or off.
Pin	output pin; default: Output (4)	Output pin. The state of the selected output will be set to "High" during the time interval defined in the fields below.
Interval Type	Weekdays Month Days ; default: Weekdays	Selects the interval type for scheduler to use.
Start Day	[Monday..Sunday] [1..31]; default: Monday 1	The day that marks the start of the time interval.
Start Time	hh:mm ([00..23]:[00..59]); default: 12:00	The hour and minute that mark the start of the time interval.
End Day	[Monday..Sunday] [1..31]; default: Tuesday 1	The day that marks the end of the time interval.
End Time	hh:mm ([00..23]:[00..59]); default: 12:00	The hour and minute that mark the end of the time interval.
Force Last Day	off on; default: off	Forces intervals to accept last day of month as a valid option if selected day does not exist during ongoing month. This field becomes visible only when 'Interval Type' is set to <i>Month Days</i> .

A Scheduler Instance will not work unless you turn both the the Scheduler service and the individual instance on:

^ GENERAL CONFIGURATION

Enable Scheduler off on

^ OUTPUT SCHEDULER INSTANCES

PIN	TYPE	FROM	TO	
Output (4)	Weekdays	Every Monday, 12:00	Every Tuesday, 12:00	<input type="text"/> <input type="text"/>


off on

ADD

SAVE & APPLY

I/O Juggler

The **I/O Juggler** is a feature that provides the possibility to create automated rules that perform certain actions based on Input state changes and other conditions. The operating sequence of I/O Juggler can be visualized as such:

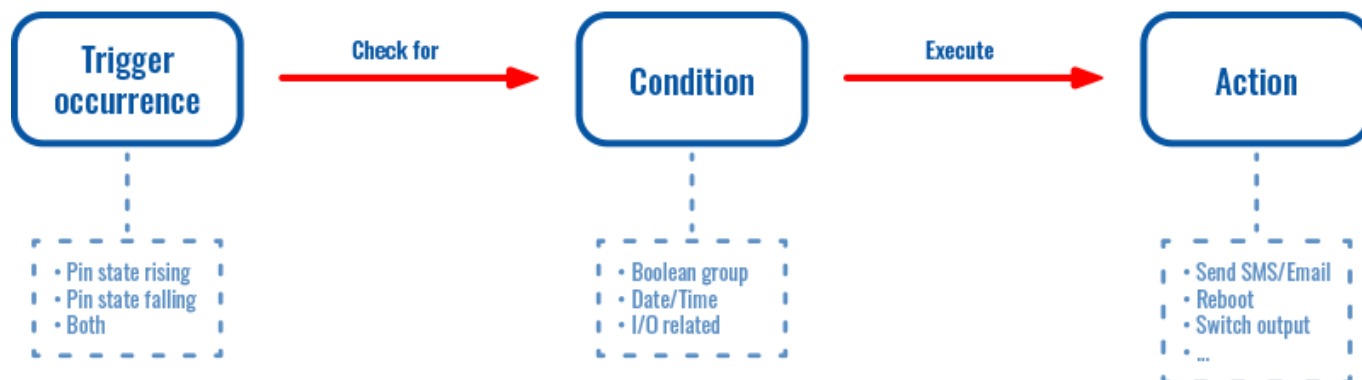

When an Input Trigger occurs, the Input check to see if user-specified conditions are also met. If so, it executes a user-specified action.


For example, if we configure the I/O Juggler like this:

- **Trigger** - input state rising.
- **Condition** - 8:00 AM - 5:00 PM.
- **Action** - send email.

The operating sequence would look like this:

1. A connected device raises the input state.
 2. This RUT956 device checks whether the current time is between 8:00 AM and 5:00 PM.
 - **Yes** - RUT956 sends an email.
 - **No** - RUT956 doesn't send an email.
-

You can specify multiple actions and multiple conditions for any I/O Juggler rule. Selecting conditions is optional. If there are no set or configured I/O Juggler conditions, the operating sequence is as such:

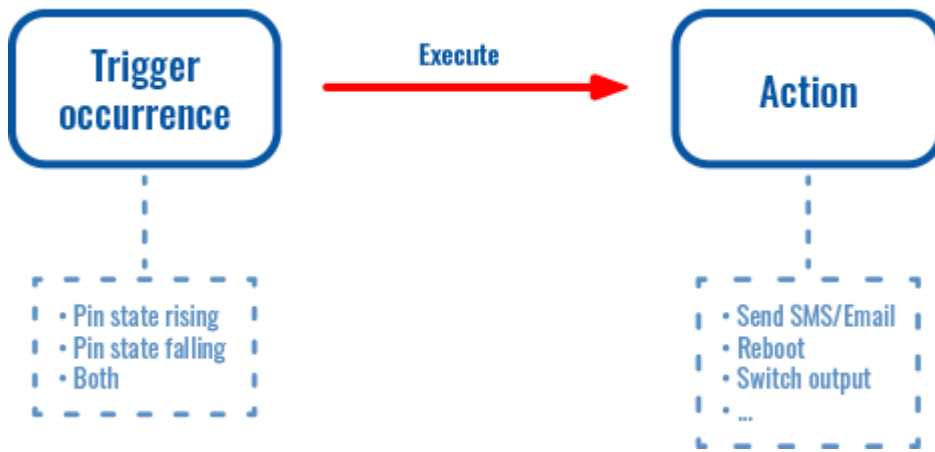


General

The **General** section is used to Input Trigger rules, which can perform a specified user-configured action when the Input state changes and when certain other user-configured conditions are met (conditions are optional).

Before you can use the I/O Juggler, you must turn it on first (off by default). This can be done by setting the 'Enable' slider to "on":

^ GENERAL



Input

The **Input** is used to create Input Rules. An Input Rule is triggered by a user-specified input state change. When this trigger occurs, the device executes a specified command if certain specified conditions are met (conditions are optional).

The Input list is empty by default. To create a new Input Rule, look to the Add Input section at the bottom of the page; select an input and click the 'Add' button:



After this you will be redirected to the configuration page for the newly added Rule, which should look similar to this:

Enabled off on

Trigger interval

Trigger

Add actions

Add conditions

< BACK

SAVE & APPLY

Field	Value	Description
Enabled	off on; default: off	Changes current profile to specified one when action triggers.
Trigger interval	integer [0..99999999]; default: 1	The shortest amount of time (in seconds) between two triggers. If the input is triggered more than once in a time period shorter than the value specified in this field, the device will react to the first trigger.
Trigger	Rising Falling Both; default: Rising	Input state change that will trigger this rule.
Add actions	i/o juggler action(s); default: none	Actions that will be executed by this rule when the specified trigger and conditions (optional) occur.
Add conditions	i/o juggler conditions; default: none	Conditions that have to be met for the rule to take action. Conditions are optional.

Actions

The **Actions** section is used to manage and create new Actions that can be executed by the I/O Juggler Rules. The figure below is an example of the Actions section, which is empty by default.

^ ACTIONS

NAME TYPE

This section contains no values yet

To create a new Action, look to the Add an Action section at the bottom of the page; enter a custom name, select an action type and click the 'Add' button:



After this you will be redirected to the configuration page for the newly added Action, which should look similar to this (example for action 'Type: Reboot'):

^ DEMO

Type

Execution delay

Add conditions

< BACK

SAVE & APPLY

Action configuration depends on the selected action 'Type'. Each Action can have one or multiple user-defined [Conditions](#) assigned to it. Actions that have Conditions assigned to them are executed only if the Conditions are met (a trigger occurrence is not enough to set off these actions). Assigning to Actions is optional.

You will find descriptions of each different action Type described on the sections below.

Type: Email

Sends an email to specified recipients. Requires an existing email account configuration on the device. Email accounts can be configured in the System → Administration → Recipients → [Email Accounts](#) page.

^ DEMO

Type

Subject

Text message

Device name - %rn; Time stamp - %ts;

Time stamp - %ts

WAN MAC address - %wm

Wired WAN IP addresses - %wi

Mobile IP addresses - %mi

Operator name - %on

Network state - %ns

Modem model - %md

SIM state - %st

RSRP - %rp

ICCID - %ic

Network info - %ni

Product code - %rn

LAN MAC address - %lm

LAN IP address - %li

SIM slot in use - %su

Connection type - %ct

IMSI - %im

Modem serial number - %is

RSCP - %cp

SINR - %sr

CELLID - %cl

Network serving - %sv

Serial number - %sn

Current FW version - %fc

Monitoring status - %ms

Signal strenght - %ss

Data connection state - %cs

IMEI - %ie

SIM pin state - %ps

ECIO - %ec

RSRQ - %rq

Neighbour cells - %nb

Execution delay

Email account

Recipient's email address +

Add conditions

Field	Value	Description
Subject	string; default: none	Subject of email.
Text message	string; default: none	Email body text. Below this field you can find special codes that begin with the '%' sign. Each code represents a piece information related to the status of the device. Include these codes in the Text message for dynamic information reports.
Execution delay	positive integer; default: none	A period of time (in seconds) which has to pass after a trigger event before the action is executed.
Email account	email account; default: none	Email account used to send the email. Email accounts can be configured in the System → Administration → Recipients → Email Accounts page.

Recipient's email address email; default: **none** Email address(es) of the message's receiver(s).

Type: Output

Changes the state of a selected output pin.

^ DEMO

Type

Execution delay

Control

Revert

Maintain off on

Invert off on

State copying off on

State

Add conditions

Field	Value	Description
Execution delay	positive integer; default: none	A period of time (in seconds) which has to pass after a trigger event before this Action is executed.
Control	output; default: Output (4)	Selects the output controlled by this Action.
Revert	integer; default: 0	After how many seconds the state will revert. If left as 0 or empty the state will not revert.
Maintain	off on; default: on	When set to 'on', the output maintains its new state after reboot (the state is changed in the config file as well).
Invert	off on; default: off	Inverts the state of the selected output, i.e., switches the output pin to a state that is opposite to its current one (high-to-low or low-to-high). This can be used instead of specifying a static state.
State copying	off on; default: off	Copies the state from the selected input and applies it to the selected output. This can be used instead of specifying a static state.
State	High Low; default: High	Specifies the state of the output pin that will be set by this Action.

Type: HTTP

Executes a HTTP POST/GET request.

Type

Method

URL

Verify off on

Alt. parameter mode off on

Parameters +

Custom headers +

Execution delay

Add conditions

Field	Value	Description
Method	Get Post; default: Get	HTTP method to be used by this Action.
URL	string; default: none	URL to send the HTTP Post/Get request to.
Verify	off on; default: off	Verifies the validity of certificates; only used with HTTPS.
Alt. parameters mode	off on; default: off	Choose a different way to pass parameters. If method is POST parameters are passed in request body. If method is GET parameters are passed through the URL.
Parameters	string; default: none	Parameters that are to be included the Post/Get request. Select a parameter (right drop-down box) and enter a custom name for it (left text box).
Text message	default: Device name - %rn; Time stamp - %ts	Message to send.
Custom headers	string; default: none	Allows to add custom headers to the HTTP requests.
Execution delay	positive integer; default: none	A period of time (in seconds) which has to pass after a trigger event before this Action is executed.

Type: Script

Executes a custom, user-written shell script.

Type

Execution delay

Specify path

Custom script No file selected

Arguments

Time stamp - %ts

WAN MAC address - %wmm

Wired WAN IP addresses - %wwi

Mobile IP addresses - %mli

Operator name - %on

Network state - %ns

Modem model - %md

SIM state - %sst

RSRP - %rpr

ICCID - %icc

Network info - %ni

Product code - %rn

LAN MAC address - %lmm

LAN IP address - %lli

SIM slot in use - %sui

Connection type - %ct

IMSI - %im

Modem serial number - %ms

RSCP - %rscp

SINR - %sr

CELLID - %cl

Network serving - %sv

Serial number - %sn

Current FW version - %fc

Monitoring status - %ms

Signal strenght - %ss

Data connection state - %cs

IMEI - %ie

SIM pin state - %ps

ECIO - %ec

RSRQ - %rq

Neighbour cells - %nb

Add conditions

Field	Value	Description
Execution delay	positive integer; default: none	A period of time (in seconds) which has to pass after a trigger event before this Action is executed.
Specify path	Upload a script Specify path; default: Upload a script	Specifies whether the script should be uploaded from an external file or a path to an internal (on this device) script file should be specified.
Custom script Script file	-(interactive button) filepath	Shows file upload window on click or provides the possibility to specify a path to an internal script file. The name and selection type of this field depends on the value set in the 'Specify path' field.
Arguments	string; default: none	Optional arguments which can be provided for the script. You can include device information with values given below this input field.

Type: Reboot

Reboots the device.

Type

Execution delay

Add conditions

Field	Value	Description
-------	-------	-------------

Execution delay positive integer;
default: **none**

A period of time (in seconds) which has to pass after a trigger event before this Action is executed.

Type: Profile

Switches to using a specified Configuration Profile.

^ DEMO

Type	Profile
Execution delay	0
Profile	default
Add conditions	-- Please select --

Field	Value	Description
Execution delay	positive integer; default: none	A period of time (in seconds) which has to pass after a trigger event before this Action is executed.
Profile	profile; default: default	Configuration Profile that will be applied by this Action. Configuration Profiles can be defined in the System → Profiles page.

Type: RMS

Enables or disables RMS service.

∨ DEMO

Type	RMS
Execution delay	0
Enable RMS	<input type="checkbox"/> off <input checked="" type="checkbox"/> on
Add conditions	No conditions available

Field	Value	Description
Execution delay	positive integer; default: none	A period of time (in seconds) which has to pass after a trigger event before this Action is executed.
Enable RMS	off on; default: off	Specifies whether RMS service will be enabled or disabled with this action.

Type: MQTT

Executes a MQTT action.

Type

Text message

Time stamp - %ts	Router name - %m	Device name - %pc
Serial number - %sn	Current FW version - %fc	LAN IP address - %ll
Monitoring status - %ms	UTC time in ISO - %it	WAN IP address - %wi
New line - %nl	Event text - %ex	SIM slot in use - %su
Mobile IP addresses - %mi	Signal strength - %ss	Operator name - %on
Network type - %ct	Data connection state - %cs	Network state - %ns
IMSI - %im	IMEI - %ie	Modem model - %md
Modem serial number - %is	SIM pin state - %ps	SIM state - %st
RSCP - %cp	ECIO - %ec	RSRP - %rp
SINR - %sr	RSRQ - %rq	ICCID - %ic
CELLID - %ci	Neighbour cells - %nb	Network info - %ni
Network serving - %sv	WAN MAC address - %wm	LAN MAC address - %lm
Input (3) - %g0	Output (4) - %g1	

Topic

Hostname

Port

Keepalive

QoS

Username

Password

TLS off on

[SAVE & APPLY](#)

Field	Value	Description
Text message string; default: none		Below this field you can find special codes that begin with the '%' sign. Each code represents a piece of information related to the status of the device. Include these codes in the Text message for dynamic information reports.
Topic	string; default: none	The name of the topic that the broker will subscribe to.
Hostname	host ip; default: none	Broker's IP address or hostname.
Port	integer [0..65535]; default: 1883	Broker's port number.
Keepalive	positive integer; default: none	The number of seconds after which the broker should send a PING message to the client if no other messages have been exchanged in that time
Qos	At most once (0) At least once (1) Exactly once (2); default: At most once (0)	A period of time (in seconds) which has to pass after a trigger event before this Action is executed.
Username	string; default: none	Username used for authentication to the Broker.
Password	string; default: none	Password used for authentication to the Broker.

Type: SIM switch

Switches to using the specified SIM card.

Type

Execution delay

Flip off on

Target

Add conditions

Field	Value	Description
Execution delay	positive integer; default: none	A period of time (in seconds) which has to pass after a trigger event before this Action is executed.
Flip	off on; default: off	When set to 'on', switches to the opposite SIM card (the that is currently NOT in use). This can be used instead of selecting a specific SIM card to switch to.
Target	SIM1 SIM2; default: SIM1	Selects a SIM card to switch to. This field is visible only when the 'Flip' field is set to 'off'.

Type: SMS

Sends an SMS message to specified recipients.

Type

Text message

Time stamp - %ts

WAN MAC address - %wm

Wired WAN IP addresses - %wi

Mobile IP addresses - %mi

Operator name - %on

Network state - %ns

Modem model - %md

SIM state - %st

RSRP - %rp

ICCID - %ic

Network info - %ni

Product code - %rn

LAN MAC address - %lm

LAN IP address - %li

SIM slot in use - %su

Connection type - %ct

IMSI - %im

Modem serial number - %is

RSCP - %cp

SINR - %sr

CELLID - %ci

Network serving - %sv

Serial number - %sn

Current FW version - %fc

Monitoring status - %ms

Signal strenght - %ss

Data connection state - %cs

IMEI - %ie

SIM pin state - %ps

ECIO - %ec

RSRQ - %rq

Neighbour cells - %nb

Execution delay

Recipients

Recipient's phone number

Add conditions

Field	Value	Description
-------	-------	-------------

Text message	string; default: none	SMS body text. Below this field you can find special codes that begin with the '%' sign. Each code represents a piece of information related to the status of the device. Include these codes in the Text message for dynamic information reports.
Execution delay	positive integer; default: none	A period of time (in seconds) which has to pass after a trigger event before the action is executed.
Recipients	Single number Group; default: Single number	Defines whether the SMS message will be sent to a single number or multiple numbers included in a user-configured Phone group. Phone groups can be configured in the System → Administration → Recipients → Phone Groups page.
Recipient's phone number Phone group	phone number phone group; default: none	Phone number of a single recipient or a Phone group of multiple recipients. The name and selection type of this field depends on the value set in the 'Recipients' field.

Type: WiFi

Sends an SMS message to specified recipients.

∨ DEMO

Type

Execution delay

Enable WiFi

Add conditions

Field	Value	Description
Execution delay	positive integer; default: none	A period of time (in seconds) which has to pass after a trigger event before the action is executed.
Enable WiFi	off on; default: off	Specifies whether all WiFi interfaces will be enabled/disabled with this action.

Conditions

The **Conditions** section is used to manage and created Conditions for I/O Juggler Actions. The figure below is an example of the Conditions section, which is empty by default.

∧ CONDITIONS

NAME	TYPE
<i>This section contains no values yet</i>	

To create a new Condition, look to the Add a Condition section; enter a custom name, select the Type of the Condition and click the 'Add' button.



After this you should be redirected to the configuration page of the newly added Condition. You will find descriptions of each different Condition type described on the sections below.

Condition type: I/O

I/O Condition type tracks the state of a selected input or output pin and considers the Condition as MET if that pin is in a user-specified state.

^ DEMO

Condition type

I/O

State

Field	Value	Description
I/O	inputs/outputs; default: Output(4)	Specifies the I/O pin to which this Condition is listening to.
State	High Low; default: High	Specifies in what state the pin has to be in in order for the Condition to be met.

Condition type: Analog voltage

Analog voltage Condition type measures the value of the Analog input and checks whether it inside or outside the user-specified range.

^ DEMO

Condition type

Input

Condition

Min voltage

Max voltage

Field	Value	Description
Condition	Inside voltage Outside voltage; default: Inside voltage	Whether to evaluate the condition as true inside or outside the specified range.
Input	inputs; default: none	Specifies the analog input to which the condition is listening to.
Min voltage	positive float; default: none	Specifies minimum voltage of range.
Max voltage	positive float; default: none	Specifies maximum voltage of range.

Condition type: Boolean group

Boolean Group will evaluate two or more existing conditions based on selected Boolean type. A Boolean Group condition will be considered as MET based on the outcome of the evaluation performed along with one of the available Boolean types:

- **AND** - all selected conditions evaluate as TRUE.
- **NAND** - at least one selected condition evaluates as FALSE.
- **OR** - at least one selected condition evaluates as TRUE.
- **NOR** - none of the selected conditions evaluate as TRUE.

For example, if we have two time Conditions (hour and minute) and a third Condition of Boolean group: AND, both Conditions 1 & 2 have to be met for Condition 3 to be evaluated as TRUE.



In this case, if at least one condition is no longer met, the Boolean group: AND Condition is evaluated as FALSE.



Below is an example of Condition type: Boolean group configuration.

^ DEMO

Condition type

Boolean type ?

Add conditions

Field	Value	Description
Boolean type	AND NAND OR NOR; default: AND	Type of boolean condition.
Add conditions	conditions; default: none	Specifies conditions which have to be met for action to occur.

Condition types: Date/Time

Lastly, you can configure Conditions based on date and time. Date/time Conditions can be configured based on:

- **Minute** of the hour
- **Hour** of the day
- **Day** of the **Week**
- **Day** of the **Month**
- **Day** of the **Year**

Condition type	Minute
Inverted function	I/O
Interval	Minute
Start minute	12
End minute	25

Each type can be configured in two distinct ways:

1. **Specific time** - configured as a single value which defines the exact time when the Condition is considered as TRUE. e.g.:
 - Hour: **8**
 - Day of Month: **1**
2. **Time interval** - configured with a start and an end value which define a window of time during which the Condition is considered as TRUE. e.g.:
 - Hours: **8-12**
 - Days of Month: **1-12**